

For the competent person

Installation manual



auroTHERM exclusive

VTK 570/2, VTK 1140/2

GB, IE

Legal information

Document type:	Installation manual
Product:	auroTHERM exclusive <ul style="list-style-type: none">– VTK 570/2– VTK 1140/2
Target group:	Authorised competent person
Language:	EN
Document number_version:	0020077994_03
Created on:	26.10.2012

Publisher/manufacturer

Vaillant GmbH

Berghauser Str. 40 ■ D-42859 Remscheid
Telefon +49 21 91 18-0 ■ Telefax +49 21 91 18-28 10
info@vaillant.de ■ www.vaillant.de

© Vaillant GmbH 2012

These instructions, or extracts thereof, may only be printed with the written consent of Vaillant GmbH.

All designations of products in these instructions are brand names/trade marks of the companies in question.

We reserve the right to make technical changes.

Contents

1	Notes on the documentation	4
1.1	Symbols used	4
1.2	Observing other applicable documents	4
1.3	Document storage	4
1.4	Applicability of the instructions	4
1.5	Name	4
2	Safety	5
2.1	Action-related warnings	5
2.2	Required personnel qualifications	5
2.3	General safety information	5
2.4	Intended use	6
2.5	Regulations (directives, laws, standards)	7
2.6	CE label	7
3	Description of the unit.....	8
3.1	Type overview.....	8
3.2	Information on the identification plate.....	8
3.3	Purpose of the unit.....	8
4	On-roof fitting and installation	8
4.1	Preparing for fitting and installation	8
4.2	Carrying out the installation	18
4.3	Completing and checking the installation	25
5	Flat roof fitting and installation	26
5.1	Preparing for fitting and installation	26
5.2	Carrying out the installation	39
5.3	Completing and checking the installation	46
6	Inspection and maintenance	47
6.1	Maintenance plan	47
6.2	Observing inspection and maintenance intervals	47
6.3	General inspection and maintenance instructions.....	47
6.4	Preparing for inspection and maintenance	47
6.5	Checking collectors and connections for damage, dirt and lack of tightness.....	47
6.6	Cleaning collectors	48
6.7	Checking brackets and collector components for firm seating	48
6.8	Check the pipe insulations for damage	48
6.9	Replacing damaged pipe insulations.....	48
6.10	Disposing of damaged pipe insulations	48
7	Troubleshooting	48
7.1	Spare parts for repair.....	48
7.2	Carrying out repairs	48
8	Decommissioning.....	49
8.1	Temporary decommissioning	49
8.2	Permanently decommissioning.....	50
9	Customer service.....	50
10	Technical data.....	51
10.1	Technical data table.....	51
10.2	Dimensions	52
10.3	Efficiency and pressure loss.....	53
Index		55











1 Notes on the documentation

1 Notes on the documentation

1.1 Symbols used

Symbols

The following symbols may appear:

	Warning symbol (→ Page 5)
	Information symbol
	Symbol for a required action
	Symbol for the result of an action
	Symbol for the completion of records and check-lists
	Symbol for a required qualification
	Symbol for a required tool
	Symbol for the specification of a technical value
	Symbol for adjacent array configuration
	Symbol for array configuration on top of each other

1.2 Observing other applicable documents

- All installation instructions for the component parts and components of the solar plant must be observed when installing the collectors.

These installation instructions are enclosed with the various system parts and supplementary components.

1.3 Document storage

Document handover

- Pass this installation manual and all other applicable documents and, if necessary, any required tools to the system operator.

Availability of documents

The system operator is responsible for storing the documents so that they are available whenever required.

1.4 Applicability of the instructions

These instructions apply for the following only:

Collector types and article numbers

VTK 570/2	0010002225
VTK 1140/2	0010002226

1.5 Name

In this manual, tube collectors are referred to as collectors.



2 Safety

2.1 Action-related warnings

Classification of action-related warnings

The action-related warnings are classified in accordance with the severity of the possible danger using the following warning signs and signal words:

Warning symbols and signal words



Danger!

Imminent danger to life or risk of severe personal injury



Danger!

Risk of death from electric shock



Warning.

Risk of minor personal injury



Caution.

Risk of material or environmental damage

2.2 Required personnel qualifications

This manual is intended for persons with the following qualifications

2.2.1 Authorised competent person

The installation, assembly and removal, start-up, maintenance, repair and decommissioning of Vaillant products and accessories must only be carried out by authorised competent persons.



Note

Each competent person is qualified for specific activities on the basis of their training. They must only work on units if they have the required qualification.

When working on the units, the competent persons must observe all applicable directives, standards, laws and other regulations.

2.3 General safety information

2.3.1 Danger due to improper use

Vaillant **auroTHERM VTK** tube collectors are constructed using state-of-the-art technology in accordance with the recognised safety rules and regulations. Nevertheless, there is still a risk of injury or death to the user or others or of damage to the unit and other property in the event of improper use or use for which it is not intended.

2.3.2 Risk of death due to improper fastening systems

The collectors may fall due to improper fastening systems.

Only the combination of Vaillant collectors and Vaillant fastening systems has been tested. This combination can withstand the forces caused by additional wind and snow loads.

- ▶ Only use the collector fastening systems that are approved by Vaillant.

2.3.3 Risk of death due to inadequate load-bearing capacity of the roof

A roof with an insufficient load-bearing capacity may collapse due to the additional load of the collectors.

Above all, additional wind and snow loads may result in higher forces which could cause the roof to collapse.

- ▶ Ensure that a structural engineer has confirmed the roof as suitable for collector installation.
- ▶ Only install the collectors on a roof that has adequate load-bearing capacity.

2.3.4 Risk of death due to falling parts

Unsecured collectors can fall from the roof and present a danger to persons.

- ▶ Block off the areas in the fall area below the place of work to a sufficient extent so that persons cannot be injured by falling objects.
- ▶ Indicate the working area, e.g. with information signs, in accordance with the applicable regulations.

2.3.5 Risk of injury and material damage due to incorrect maintenance and repairs

If maintenance or repair work is not carried out, or is carried out incorrectly, this may result in injuries or in damage to the solar plant.

- ▶ Ensure that only an approved competent person carries out maintenance and repair work.

2.3.6 Risk of death due to inadequate fastening of the collectors

Collectors can fall from their anchors if they are not properly fastened on the roof. Collectors falling from the roof could cause life-threatening accidents.

- ▶ Perform all work steps as described in this manual.
- ▶ Observe all safety precautions described in this manual.
- ▶ In addition, comply with all safety regulations that specifically apply in your region.

2.3.7 Risk of burns due to hot collector surfaces

In the event of solar radiation inside the units, collectors can reach 300 °C. If you touch the collectors without protection, you could burn yourself.

- ▶ Remove the sun protection film installed at the factory only after the solar plant has been started up.
- ▶ Avoid performing installation and maintenance work under direct sunlight.



2 Safety



- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.

2.3.8 Risk of injury due to breaking glass

The glass of the collectors may break due to mechanical destruction or torsion.

- ▶ Wear suitable safety gloves.
- ▶ Wear suitable protective goggles.

2.3.9 Material damage caused by a high-pressure cleaner

High-pressure cleaners may damage the collectors due to the extremely high pressure.

- ▶ Never clean the collectors with a high-pressure cleaner.

2.3.10 Material damage due to lightning

Lightning can damage the collector system.

- ▶ Connect the collector system to a lightning protection device in accordance with applicable regulations.

2.3.11 Frost damage due to water in the solar circuit

Water residue in the collector may freeze in frosty conditions and damage the collector.

- ▶ Never fill or flush the collector with water.
- ▶ Only fill and flush the collector with Vaillant ready-mixed solar fluid.
- ▶ Check the solar fluid regularly with an antifreeze tester.

2.3.12 Material damage due to an unsuitable tool

An unsuitable tool may damage the solar plant.

- ▶ Only use a suitable tool.
- ▶ In particular, only use the tool specified in the work steps of this manual.

2.3.13 Risk of death from electric shock

Incorrect installation or a faulty power cable can result in a supply voltage on the pipes, which can cause life-threatening injuries.

- ▶ Secure earthing pipe clamps to the pipes.
- ▶ Connect the earthing pipe clamps to a busbar using 16 mm² copper cable.

2.3.14 Material damage due to overvoltage

Overvoltage may damage the solar plant.

- ▶ Earth the solar circuit to provide equipotential bonding and overvoltage protection.
- ▶ Secure earthing pipe clamps to the pipes.

- ▶ Bond the earthing pipe clamps to a busbar using 16 mm² copper cable.

2.3.15 Risk of death and material damage due to contact corrosion

For roofs or façade sections made of metals more precious than aluminium (e.g. copper roof), contact corrosion may occur on the brackets. Collectors could fall and put persons at risk.

- ▶ Use suitable underlays to separate the metals.

2.3.16 Material damage due to snow falling from roofs

If the collector field is installed below a sloping roof, then snow falling from the roof may damage the collectors.

- ▶ Install snow fences above the collectors as protection against falling snow.

2.4 Intended use

2.4.1 Intended use

Vaillant **auroTHERM VTK** tube collectors are used for solar heating support and for solar-supported hot water generation.

2.4.2 Suitability of the equipment

The collectors must only be operated with Vaillant ready-mixed solar fluid. Passing heating water or hot water directly through the collectors constitutes improper use.

2.4.3 Improper use

Any use which is not explicitly mentioned in the chapter "Intended use" (→ Page 6) is deemed improper.

Any other or additional use does not comply with the intended use. Any direct commercial or industrial use is also deemed to be improper. The manufacturer/supplier is not liable for any damage resulting from such use. The user alone bears the risk.

2.4.3.1 Combination with other components

Vaillant **auroTHERM VTK** tube collectors must only be combined with components (fastenings, connections, etc.) and system parts that are supplied by Vaillant. The use of other components or system parts shall be considered as improper use.



2.4.3.2 Installation in or on vehicles

Installation of the Vaillant **auroTHERM VTK** tube collector in or on a vehicle is not permissible and is considered improper use. Units that are not classed as vehicles are those that are installed in a fixed and permanent location (known as "fixed installation").

2.4.4 Other applicable documents

Intended use includes the following:

- observance of accompanying operating, installation and servicing instructions for Vaillant products as well as for other parts and components of the system,
- installing and fitting the unit in accordance with the boiler and system approval,
- compliance with all inspection and maintenance conditions listed in the instructions.

2.5 Regulations (directives, laws, standards)

2.5.1 Installation regulations

Applies to: Great Britain

Technical Guidance

The system must be installed in accordance with all relevant and applicable national regulations, and must be installed to suit site conditions. Observe all national regulations, including:

- Working at Heights Regulations 2005
- Health and Safety at Work Act 1974
- Electricity at Work Regulations 1989
- IEE Wiring Regulations BS 7671
- Lightning protection requirements
- Equipotential bonding of electrical installations.

Related documents

The installation of the solar system must be in accordance with the relevant requirements of Health and Safety Document No. 635 (The Electricity at Work Regulations 1989), BS7671 (IEE Wiring Regulations) and the Water Supply (Water Fitting) Regulations 1999, or The Water Bylaws 2000 (Scotland). It should also be in accordance with the relevant requirements of the Local Authority, Building Regulations, The Building Regulations (Scotland), The Building Regulations (Northern Ireland) and the relevant recommendations of the following British Standards:

- BS EN 806: Specification for installations inside buildings conveying water for human consumption
- BS 6700: Services supplying water for domestic use within buildings and their curtilages
- BS 5449 Forced circulation hot water central heating systems for domestic premises. Note: only up to 45 kW
- BS. 6880 Low temperature hot water heating systems of output greater than 45 kW
- Part 1 Fundamental and design considerations.
- Part 2 Selection of equipment
- Part 3 Installation, commissioning and maintenance

- BS 6114: Expansion vessels using an internal diaphragm for unvented hot water supply systems
- BS. 4814 Specification for: Expansion vessels using an internal diaphragm, for sealed hot water heating systems
- Unvented hot water systems must comply with building regulation G section 3

2.5.2 Regulations for the prevention of accidents

Applies to: Great Britain

When carrying out works such as solar installation work it is necessary to do so in a safe and workman like manner, taking due care of any aspects of the works that could result in injuries to person in or about the building as well as workers, passers by and the general public at large. To that end these works must conform, but not be limited to, the current regulations in force such as the following:

- Health and Safety at Work act 1974
- Work at Height Regulations 2005
- Electricity at Work Regulations 1989
- All necessary Building Regulations

Work should be preceded by a risk assessment covering all aspects of health and safety risks, or training requirements that can reasonably be foreseen to be associated with the work. All scaffolding in the UK, other than prefabricated (zip-up) scaffold towers, must be designed and constructed by a vetted contractor, and have suitable kick boards, hand rails and where appropriate netting. Areas around the scaffolding should be zoned off and marked with suitable warning signs to a suitable distance to protect persons from falling objects. Workers should have available and use personal protective equipment as necessary. This would include equipment such as fall protection systems, safety gloves, goggles, dust masks as well as any specialised equipment that may be in use such as lifting and handling equipment.

The completed works shall comply with all necessary BS EN Standards and Codes of practice as well as Building control or planning requirements and be confirmed where necessary by notification to building control or the appropriate competence based notification body.

2.6 CE label



The CE label documents that the appliances as described in the type overview satisfy the basic requirements of the following directives:

- Directive 97/23/EC of the European Parliament and Council on the approximation of the laws of the member states regarding pressure equipment





3 Description of the unit

3 Description of the unit

3.1 Type overview

- VTK 570/2
- VTK 1140/2

3.2 Information on the identification plate

Information on the identification plate	Meaning
	CE label: The collectors comply with the relevant product-specific European guidelines.
	Solar Keymark: The collectors have been successfully tested according to the rules and requirements for the Solar Keymark.
	Read the installation manual.
VTK 570/2 VTK 1140/2	Type designation
VTK	Vaillant tube collector
570, (1140)	Collector output
/2	Unit generation
auroTHERM exclusive	Unit type
Vacuum tube collector	Tube collector
AG	Gross area
VF	Liquid volume
m	Weight
I	Dimensions
Q _{max}	Max. output
t _{stgf}	Stagnation temperature
P _{max}	Max. permissible operating pressure
Serial-No. 21054500100028300006000001N4  21054500100028300006000001N4	Bar code with serial number The 7th to 16th digits of the serial number form the article number

3.3 Purpose of the unit

The collectors are used for solar heating support as well as for solar-supported hot water generation.

4 On-roof fitting and installation

- When fitting and installing the collectors, you must observe the chapter "Safety".


4.1 Preparing for fitting and installation

4.1.1 Delivery, transport and positioning

4.1.1.1 Storing collectors

- To prevent moisture from penetrating into the collector, always store the collectors dry and in a weatherproof area.

4.1.1.2 Checking the scope of delivery

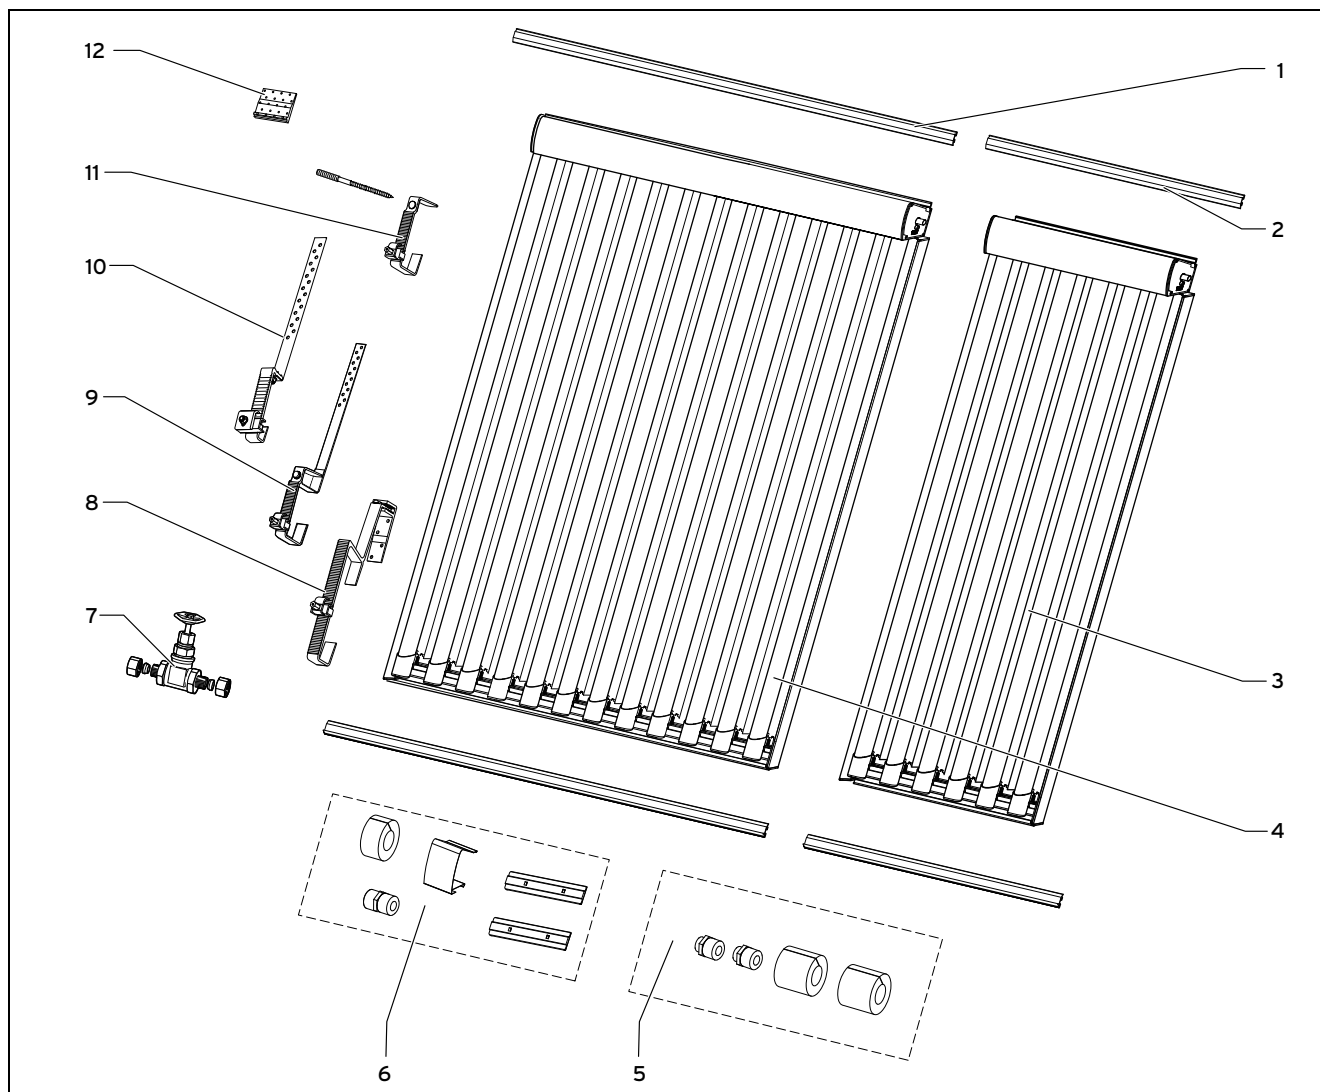

List of materials for on-roof installation

1	VTK 1140/2 rail set, 2 units	9	Roof bracket type S (for beaver tail, etc.) (basic set), 4 units
2	VTK 570/2 rail set, 2 units		Roof bracket type S (for beaver tail, etc.) (extension set, on top of each other), 2 units
3	VTK 570/2 tube collector, 1 unit	10	Roof bracket type S flat (for beaver tail, etc.) (basic set), 4 units
4	VTK 1140/2 tube collector, 1 unit		Roof bracket type S flat (for beaver tail, etc.) (extension set, on top of each other), 2 units
5	VTK installation set (basic set), 1 unit	11	Hanger bolt fastening set (basic set), 4 units
6	VTK installation set (extension set), 1 unit		Hanger bolt fastening set (extension set, on top of each other), 2 units
7	Stop valve, 2-way VTK for parallel connection, 1 unit	12	Long base, hook type P, 4 units
8	Roof bracket type P (for pantile) (basic set), 4 units		
	Roof bracket type P (for pantile) (extension set, on top of each other), 2 units		

► Use the image to check that the installation sets are complete.



Note

Not all roof bracket types are available in all countries.

4 On-roof fitting and installation

4.1.1.3 Transporting collectors

1. To protect the collectors against damage, always transport them when they are standing horizontally.
2. Transport the collectors to the roof using suitable aids.


4.1.2 Complying with clearances and installation clearances

In order to fit the collectors correctly, the specified clearances and installation clearances must be observed.

- For the necessary edge clearances, see chapter "Defining edge clearances of the roof brackets".


4.1.3 Selecting suitable connection

- Select the appropriate connection for the collectors.

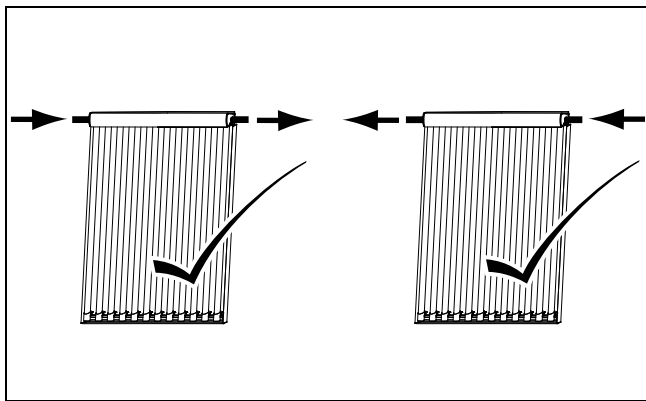


- Ensure that the solar fluid flows through the collectors either from left to right or from right to left.

Conditions: Number of VTK 1140/2 collectors: 1 ... 7

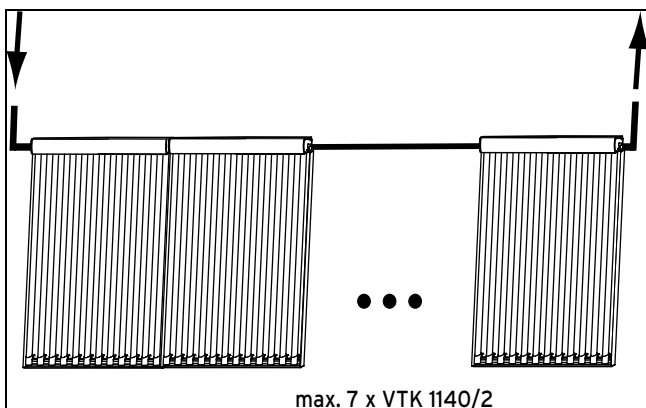

- Switch up to 7 VTK 1140/2 units in series (according to the 14 m² aperture surface area).

Conditions: Parallel connection, aperture surface area: $\leq 7 \text{ m}^2$

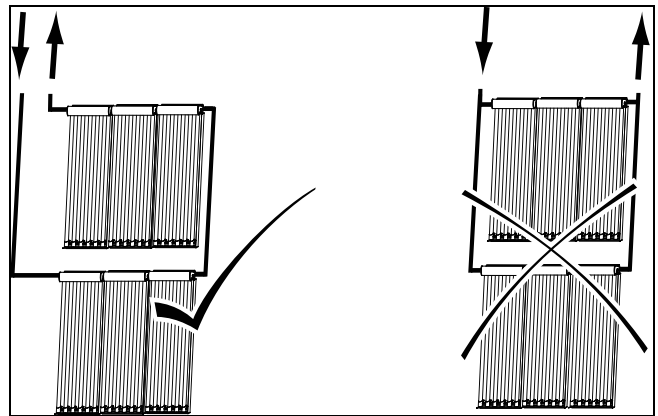


- Always connect as many collectors as possible in series, even when several collector rows are arranged on top of each other.



Note


Up to an aperture surface area of 7 m² (accordingly for 3 pcs VTK 1140/2 + 1 pc VTK 570/2), you must switch the collectors in series.

Conditions: Parallel connection, aperture surface area: $\geq 14 \text{ m}^2$

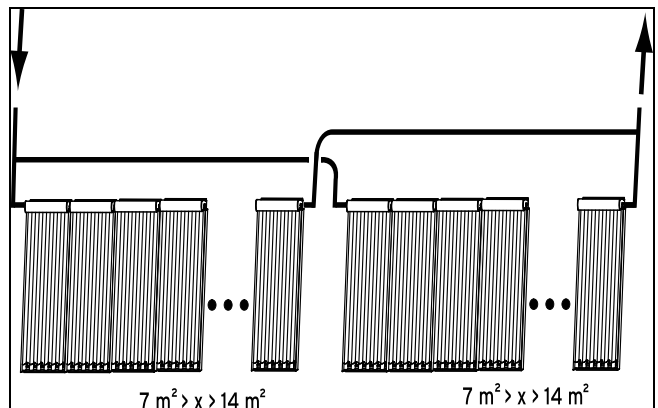

- Set up several parallel collector rows and connect these hydraulically in parallel.
- Always connect as many collectors (at least 7 m²) as possible in series.

Conditions: Parallel connection

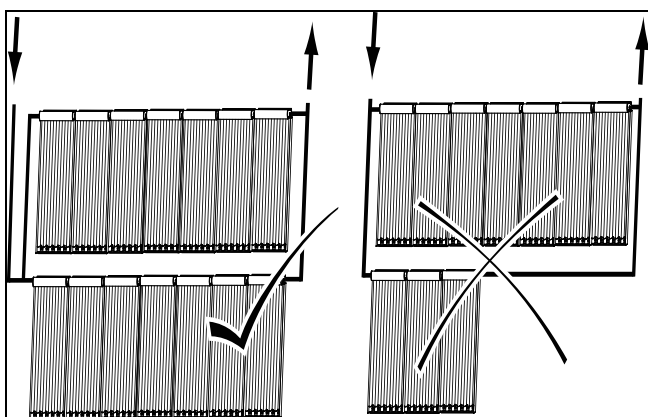

- ▶ To avoid pressure losses in the sub-collector fields, only use parallel connection for collector rows with the same number of collectors.
- ▶ Ensure that each sub-collector field has the same total tube length in the flow and return (Tichelmann system), in order to avoid pressure losses in the connection tubes.

4.1.4 Preparing the roof duct




Caution.

Building damage due to penetrating water.

If the roof duct is not prepared properly, water may penetrate the building interior.

- ▶ Ensure that the roof duct is prepared properly.

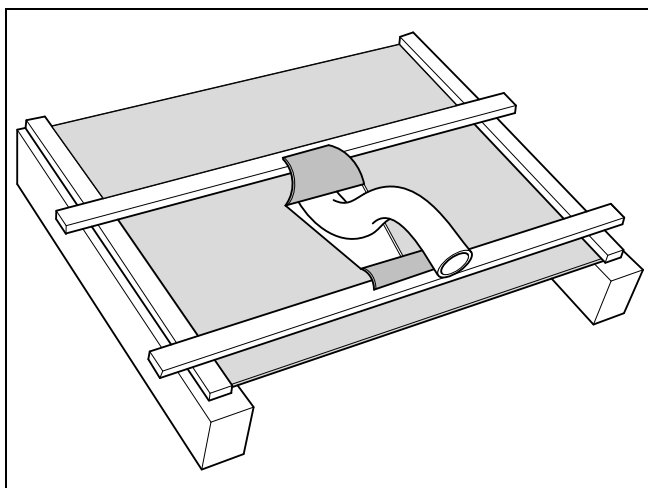

1. Make a v-shaped cut in the roofing felt membrane.
2. Fold the upper, wider flap onto the roof batten above, and fold the lower, narrower flap onto the roof batten below.
3. Fix the roofing felt membrane tight to the roof batten, so that any moisture runs off to the side.

4 On-roof fitting and installation


4.1.5 Putting together components



Note

In the case of roof batten clearances greater than 460 mm, the 2-row and 3-row installations are not possible. In this case, you can install the 2 or 3 rows individually (without using the same central roof anchor).

Conditions: Collector rows: 1

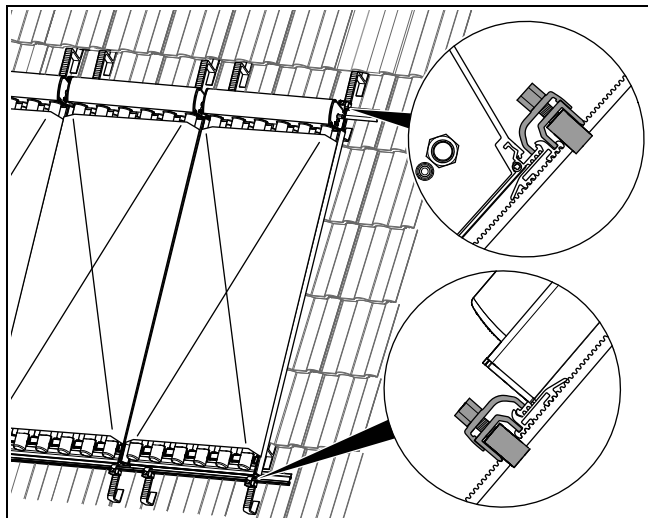


- Use the following table to put together the components for installation.






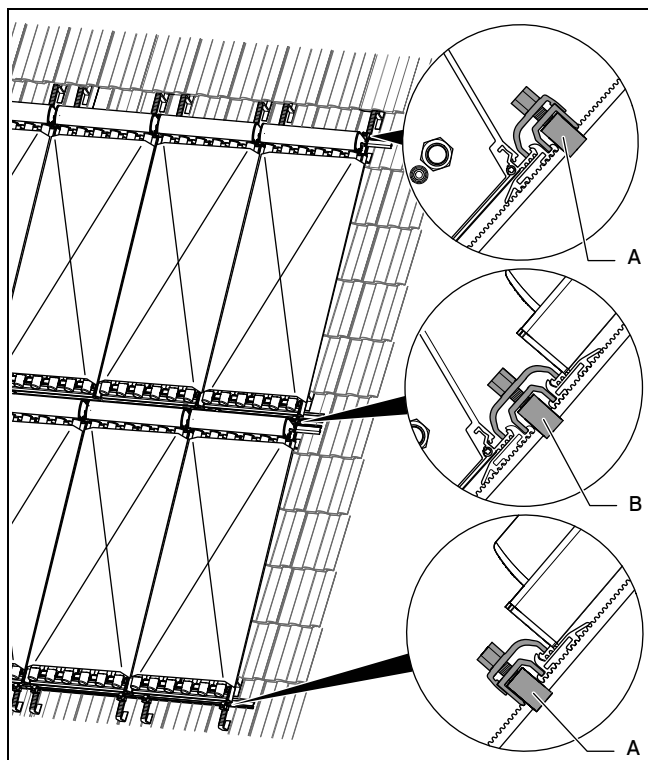


Number of VTK 1140/2 collectors		1	2	3	4	5	6	7
Components		Required sets						
VTK installation set (basic set)		1 ¹						
VTK installation set (extension set)		–	1	2	3	4	5	6
Roof bracket set type P (pantile)		1 ²	2 ²	3 ²	4 ²	5 ²	6 ²	7 ²
Roof bracket set type S (slate)								
Roof bracket set type S, flat (slate)								
Roof anchor set, hanger bolt								
Rail set (2 pcs), VTK 1140/2		1	2	3	4	5	6	7
¹ 1 set for connecting to the pipelines; the collectors are connected together using the extension set								
² valid up to 700 m above sea level								

Number of VTK 1140/2 collectors		1	2	3	4	5	6
Number of VTK 570/2 collectors		1	1	1	1	1	1
Components		Required sets					
VTK installation set (basic set)		1 ¹					
VTK installation set (extension set)		1	2	3	4	5	6
Roof bracket set type P (pantile)		2 ²	3 ²	4 ²	5 ²	6 ²	7 ²
Roof bracket set type S (slate)							
Roof bracket set type S, flat (slate)							
Roof anchor set, hanger bolt							
VTK 1140/2 rail set		1	2	3	4	5	6
VTK 570/2 rail set		1					
¹ 1 set per row for connecting to the pipelines; the collectors are connected together using the extension set							
² Valid up to 700 m above sea level							

Conditions: Collector rows: 2



► Use the following table to put together the components for installation.


Number of VTK 1140/2 collectors per row			1	2	3	4	5	6	7
Components			Required sets						
VTK installation set (basic set)			2 ¹						
VTK installation set (extension set)			–	2	4	6	8	10	12
Roof bracket set type P (pantile)		A	1 ²	2 ²	3 ²	4 ²	5 ²	6 ²	7 ²
Roof bracket set type S (slate)									
Roof bracket set type S, flat (slate)									
Roof anchor set, hanger bolt									
Roof bracket set type P (pantile)		B	1 ²	2 ²	3 ²	4 ²	5 ²	6 ²	7 ²
Roof bracket set type S (slate)									
Roof bracket set type S, flat (slate)									
Roof anchor set, hanger bolt									
Rail set (2 pcs), VTK 1140/2			2	4	5	6	10	12	14

¹ 1 set per row for connecting to the pipelines; the collectors are connected together using the extension set – if the rows are also connected together so that they are flat-sealed.

² Valid up to 700 m above sea level

4 On-roof fitting and installation

Conditions: Collector rows: 3

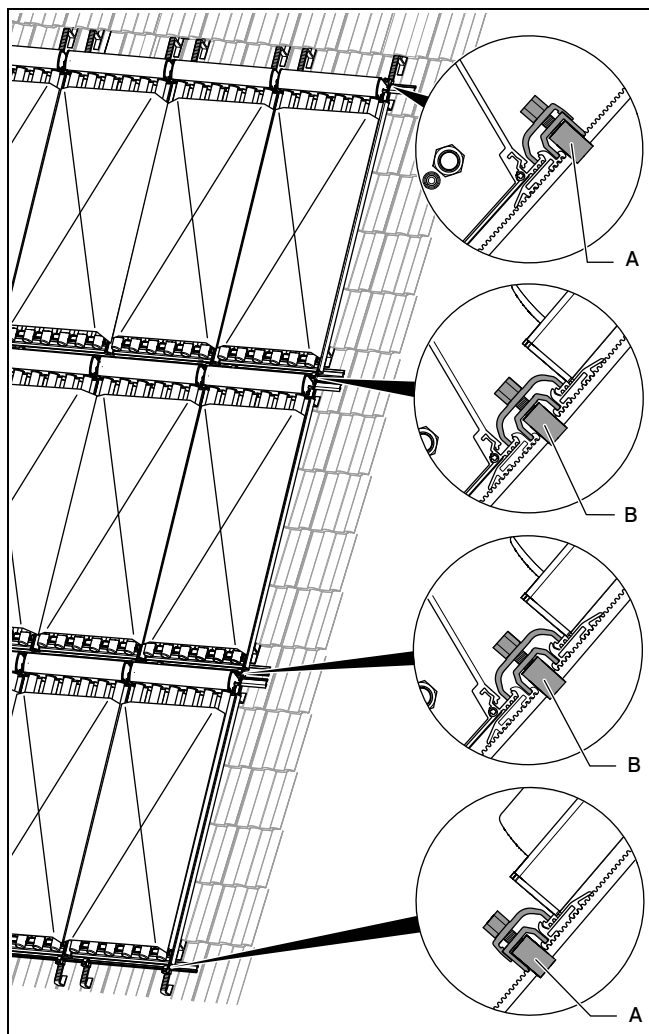

► Use the following table to put together the components for installation.

Number of VTK 1140/2 collectors per row			1	2	3	4	5	6	7
Components			Required sets						
VTK installation set (basic set)			3 ¹						
VTK installation set (extension set)			–	3	6	9	12	15	18
Roof bracket set type P (pantile)		A	1 ²	2 ²	3 ²	4 ²	5 ²	6 ²	7 ²
Roof bracket set type S (slate)									
Roof bracket set type S, flat (slate)									
Roof bracket set type P (pantile)		B	2 ²	4 ²	6 ²	8 ²	10 ²	12 ²	14 ²
Roof bracket set type S (slate)									
Roof bracket set type S, flat (slate)									
Rail set (2), VTK 1140/2			3	6	9	12	15	18	21
¹ 1 set per row; the collectors are connected together using the extension set – if the rows are also connected together so that they are flat-sealed.									
² Valid up to 700 m above sea level									

4.1.6 Determining the number of required roof brackets

1. Ask the local building authority for the regional maximum snow load s_k .

Conditions: Maximum snow load: $\leq 3 \text{ kN/m}^2$

- Install 4 roof brackets per collector.

Conditions: Maximum snow load: $3 < s_k \leq 4.5 \text{ kN/m}^2$

- Install 6 roof brackets per collector.

Conditions: Maximum snow load: $> 4.5 \text{ kN/m}^2$

- Compile statistics for the individual case.
- Ensure that the maximum permissible snow load per collector is 5.4 kN/m^2 .



Note

The maximum permissible load per roof bracket type S/type P is: $F_{\max} = 1.875 \text{ kN}$.


2. If you are using extension sets, ensure that the roof bracket is positioned centrally with equal clearances.

4.1.7 Defining the edge clearances of the roof brackets

Maximum lift points caused by wind loads can occur at the cut-away edges of wall and roof areas (e.g. verge and eaves). These maximum lift points result in high loads on the collectors and installation systems.

Areas in which lift points occur are called edge areas. Corner areas are zones in which edge areas overlap and especially high pull forces occur.

Edge and corner areas must not be used as installation areas.

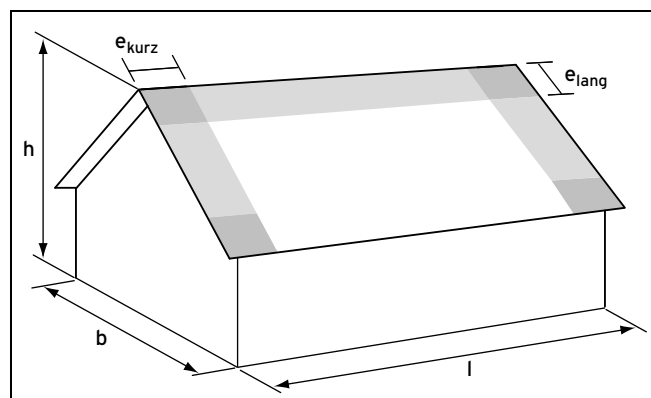

b Building width l Building length
h Building height

- Calculate the building width w , building height h and building length l .
- The values for the edge clearances to be observed, e_{short} and e_{long} can be found in the following tables.

b [m]	H [m]										
	5	6	7	8	9	10	11	12	13	14	15
8	1.0										
9	1.0										
10	1.0										
11	1.0	1.1									
12	1.0	1.2									
13	1.0	1.2	1.3								
14	1.0	1.2	1.4								
15	1.0	1.2	1.4	1.5							
16	1.0	1.2	1.4	1.6							
17	1.0	1.2	1.4	1.6	1.7						
18	1.0	1.2	1.4	1.6	1.8						

l [m]	h [m]										
	5	6	7	8	9	10	11	12	13	14	15
10	1.0										
11	1.0	1.1									
12	1.0	1.2									
13	1.0	1.2	1.3								
14	1.0	1.2	1.4								
15	1.0	1.2	1.4	1.5							
16	1.0	1.2	1.4	1.6							
17	1.0	1.2	1.4	1.6	1.7						
18	1.0	1.2	1.4	1.6	1.8						
19	1.0	1.2	1.4	1.6	1.8	1.9					
20	1.0	1.2	1.4	1.6	1.8	2.0					


- When installing the roof brackets, observe the calculated edge clearances.

4.1.8 Defining the roof bracket clearances

The roof brackets have different clearances depending on the array configuration of the collectors (adjacent or on top of each other).

4 On-roof fitting and installation

4.1.8.1 Adjacent array configuration

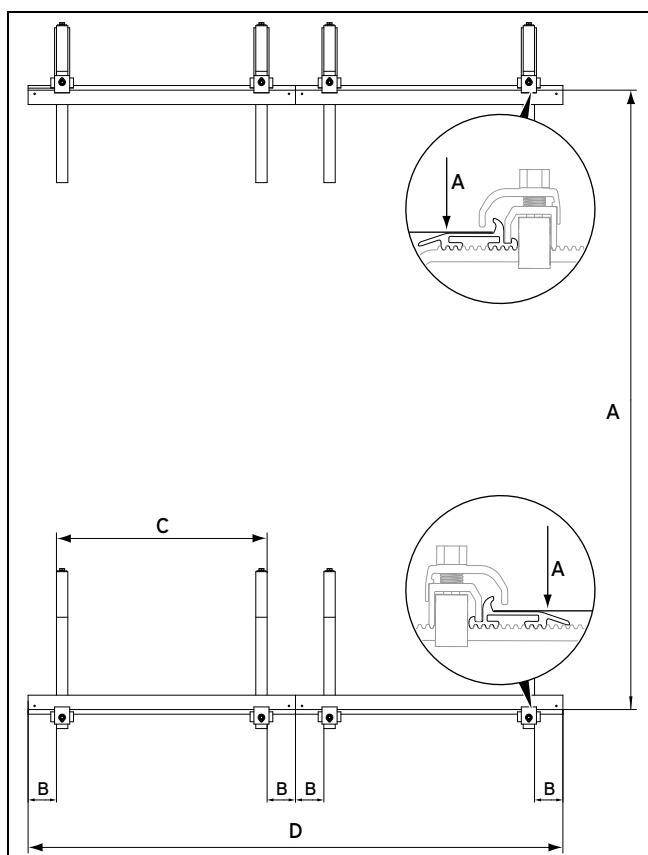

1. Define the clearances of the roof brackets.

Quantity		A	B	C	D
VTK 570/2	VTK 1140/2				
-	1	1663 * / 1638 **	100 - 200	VTK ₁₁₄₀ 997 - 1197 -----	1397
-	2				2794
-	3				4191
-	4				5588
-	5				6985
-	6				8382
-	7			VTK ₅₇₀ 507 - 607	9779
1	1				2104
1	2				3501
1	3				4898
1	4				6295
1	5				7692
1	6				8382

2. Ensure that there is sufficient play for the anchors.
 - Pre-installation dimension (*) = Finished installation dimension (**) + 20-25 mm


4.1.8.2 Array configuration on top of each other



Note

In the case of roof batten clearances greater than 460 mm, the 2-row and 3-row installations are not possible. In this case, you can install the 2 or 3 rows individually (without using the same central roof anchor).

Conditions: Collector rows: 2

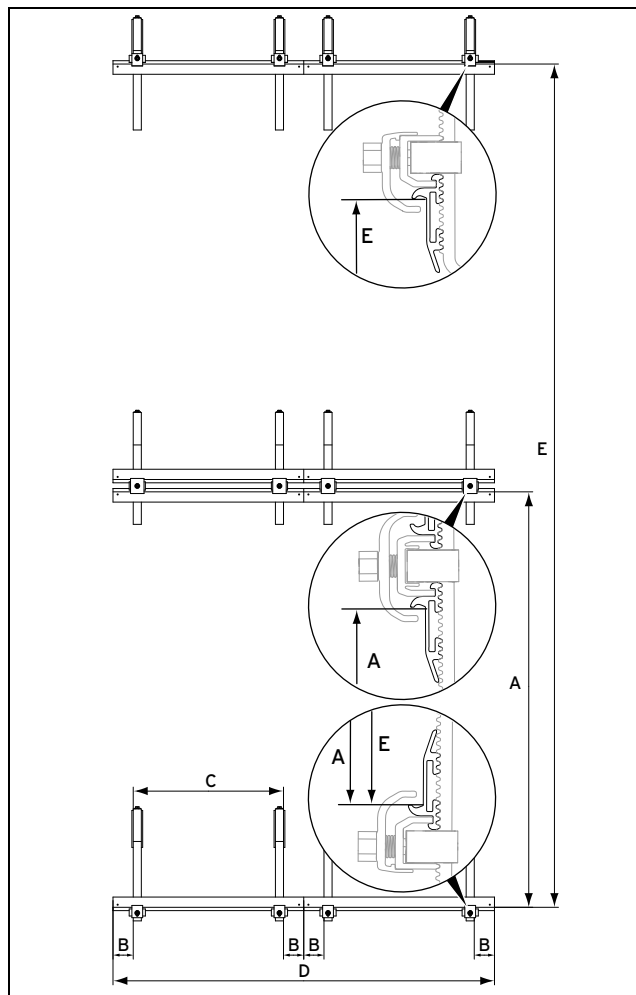

- Define the clearances of the roof brackets.


Quantity		A	B	C	D	E
VTK 570/2	VTK 1140/2					
-	1	1663 * / 1638 **	100 - 200	VTK ₁₁₄₀ 997 - 1197 -----	1397	3322
-	2				2794	
-	3				4191	
-	4				5588	
-	5				6985	
-	6				8382	
-	7			VTK ₅₇₀ 507 - 607	9779	
1	1				2104	
1	2				3501	
1	3				4898	

On-roof fitting and installation 4

Quantity		A	B	C	D	E
VTK 570/2	VTK 1140/2					
1	4	1663 * / 1638 **	100 - 200	VTK ₁₁₄₀ 997 - 1197 -----	6295	3322
1	5			VTK ₅₇₀ 507 - 607	7692	
1	6				8382	

- Ensure that there is sufficient play for the anchors.
 - Pre-installation dimension (*): = Finished installation dimension (**) + 20-25 mm

Conditions: Collector rows: 3

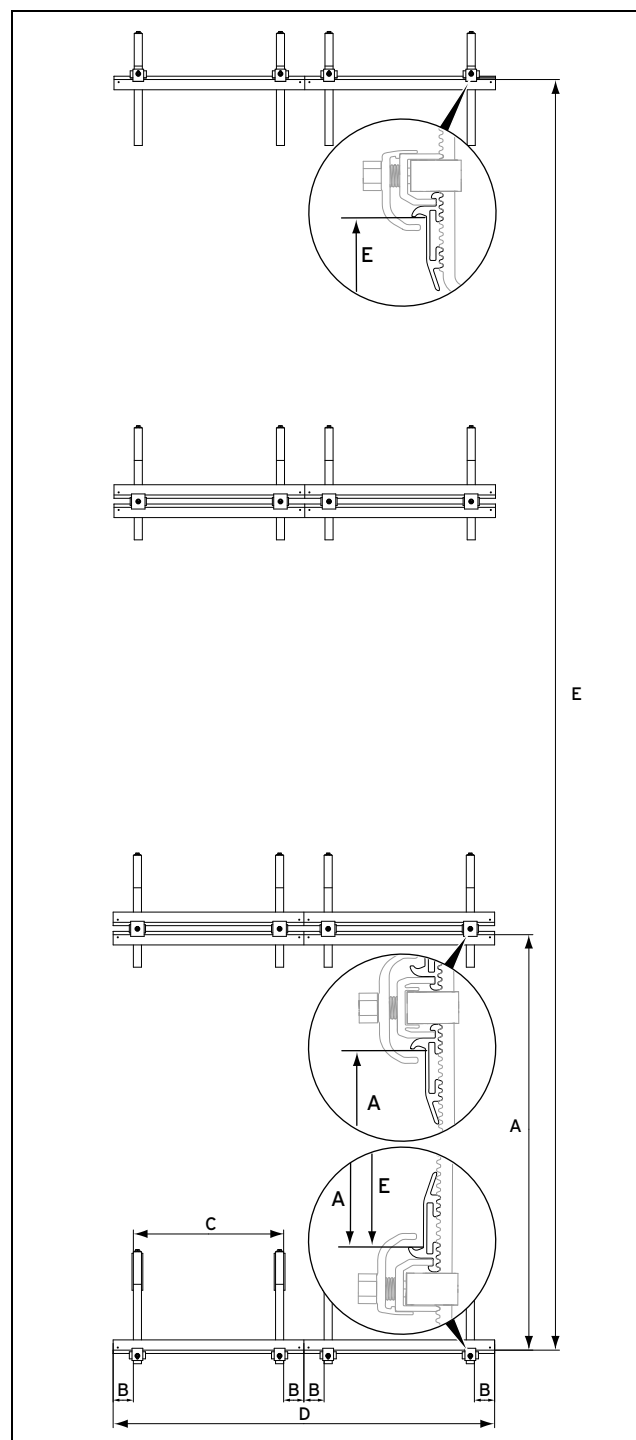

- Define the clearances of the roof brackets.

Quantity		A	B	C	D	E
VTK 570/2	VTK 1140/2					
-	1	1663 * / 1638 **	100 - 200	VTK ₁₁₄₀ 997 - 1197 ----- VTK ₅₇₀ 507 - 607	1397	5006
-	2				2794	
-	3				4191	
-	4				5588	
-	5				6985	
-	6				8382	
-	7				9779	

4 On-roof fitting and installation

Quantity		A	B	C	D	E
VTK 570/2	VTK 1140/2					
1	1	1663 * / 1638 **	100 - 200	VTK ₁₁₄₀	2104	5006
1	2			997 -	3501	
1	3			1197	4898	
1	4			-----	6295	
1	5			VTK ₅₇₀	7692	
1	6			507 - 607	8382	


- Ensure that there is sufficient play for the anchors.
 - Pre-installation dimension (*): = Finished installation dimension (**) + 20-25 mm

4.2 Carrying out the installation


The installation steps and notes in these instructions apply for both array configurations. Any different installation steps are clearly indicated in individual cases.

4.2.1 Installing roof brackets

4.2.1.1 Installing type P (for pantile)

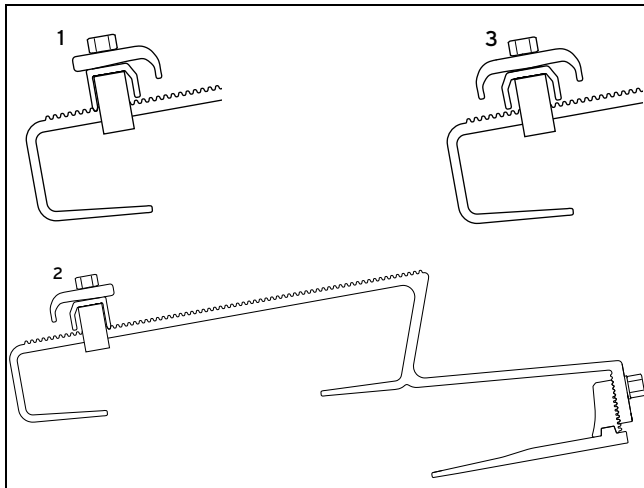


- 1 Lower roof bracket 3 Middle roof bracket
- 2 Top roof bracket
1. Use the top, middle and lower type P roof brackets shown.

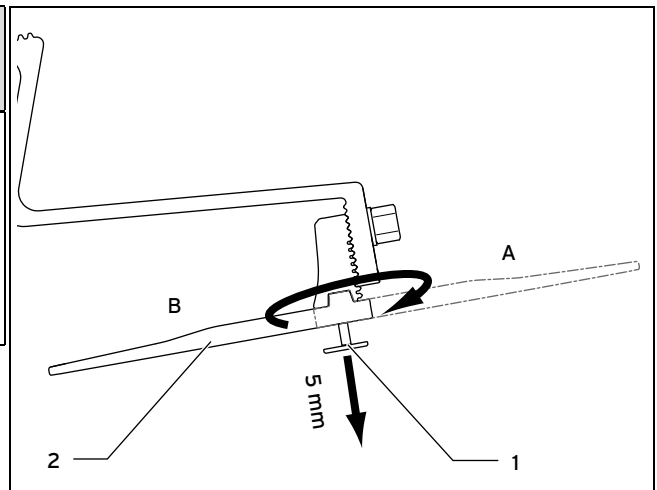


2. Secure the type P roof bracket either to the rafters (A) or to the roof batten (B).
3. To do this, loosen the bolt (1) on the base of the roof bracket with the enclosed bit and unscrew the bolt by approx. 5 mm.
4. If you wish to secure the roof bracket onto the rafters, turn the base (2) outwards (A).
5. If you wish to secure the roof bracket onto the roof batten, turn the base (2) inwards (B).

Conditions: Fastening type: To rafters

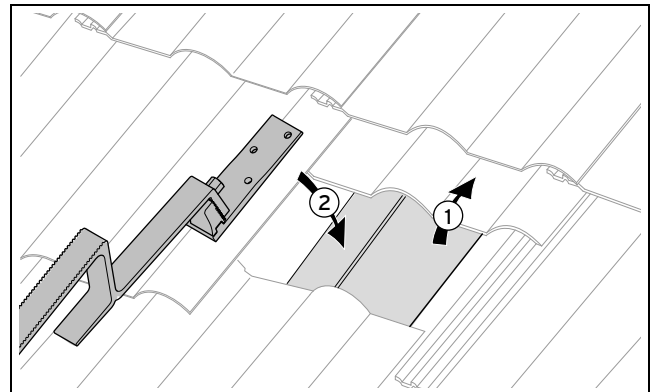


- Define the clearances of the roof brackets. (→ Page 16)
- Expose the rafters at the corresponding position (1).
- Position the roof bracket (2). Ensure the correct position of the top, middle and lower roof brackets.

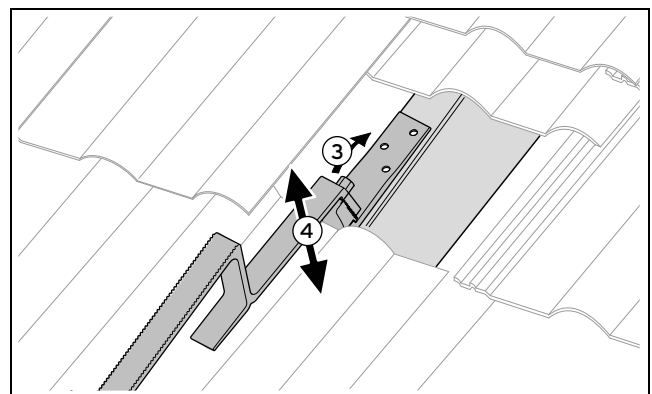

- Undo the top bolt until the height of the roof bracket can be adjusted (3).
 - Working materials: SW 13 spanner

- ▶ Adjust the roof bracket to the height of the pantiles, so that the top part of the roof bracket lies on the roofing (4).
- ▶ Tighten the top bolt.
 - Working materials: SW 13 spanner

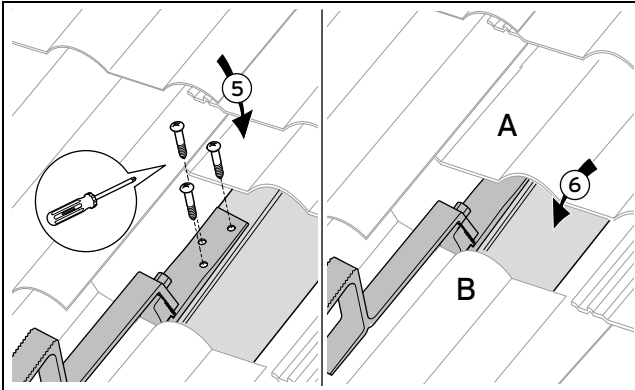

- ▶ Screw the roof bracket onto the rafters using the three bolts supplied (5).
- ▶ Slide the pantiles into their original position again (6).
- ▶ To ensure that the tiles lie tightly together, notch guttering onto the underside (A) or the top side (B) of the pantile using a hammer, if necessary.




Note


For some roof types, it may be necessary to offset the roof bracket laterally opposite the rafters.

To do this, use the accessory "long base" article number 0020080177 (not available in all countries).


Conditions: Fastening type: To roof batten

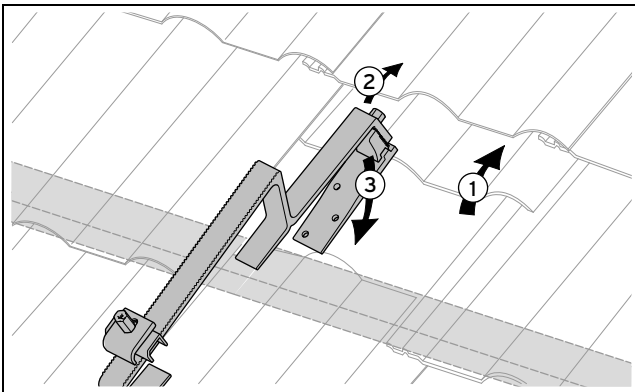

- ▶ Define the clearances of the roof brackets. (→ Page 16)
- ▶ Slide one to two pantiles upwards at the corresponding position above the roof batten (1).
- ▶ Undo the top bolt until the height of the roof bracket can be adjusted (2).
- Working materials: SW 13 spanner
- ▶ Hang the roof bracket on the roof batten (3). Ensure that the top, middle and lower roof brackets are positioned correctly.

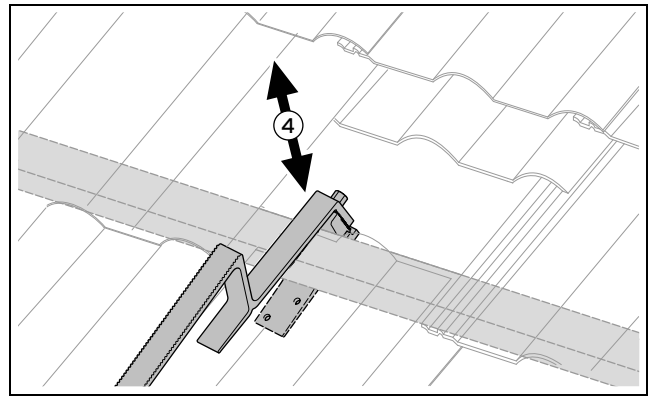


- ▶ Adjust the roof bracket to the height of the pantiles, so that the top part lies on the roofing and the bottom part is pushed tight against the roof batten from the bottom (4).
- ▶ Ensure that the roof bracket fits securely around the roof batten and pantile when it engages.

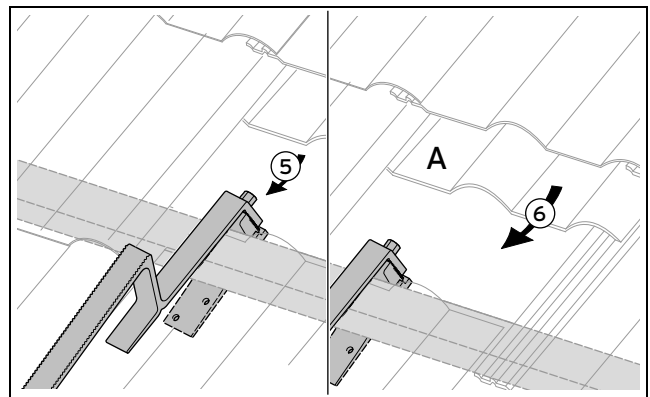


- ▶ Tighten the top bolt (5).
 - Working materials: SW 13 spanner
- ▶ Slide the pantiles into their original position again (6).
- ▶ To ensure that the tiles lie tightly together, notch guttering onto the underside of the pantiles (A) using a hammer, if necessary.

4.2.1.2 Installing type S (for slate)

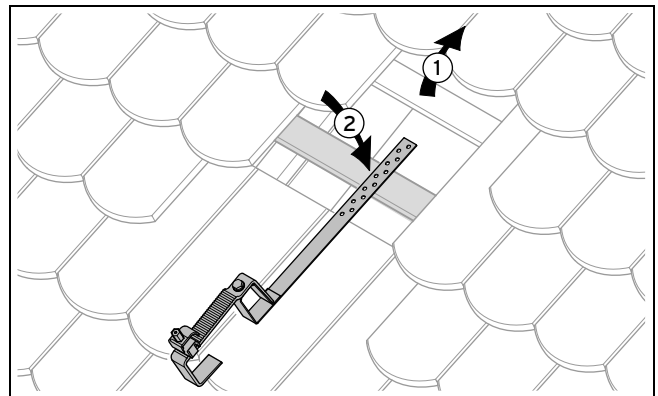


1. Define the clearances of the roof brackets. (→ Page 16)
2. At the appropriate position, expose the rafters or roof batten (1).
3. Position the roof bracket. Ensure the correct position of the top, middle and lower roof brackets (2).

4 On-roof fitting and installation

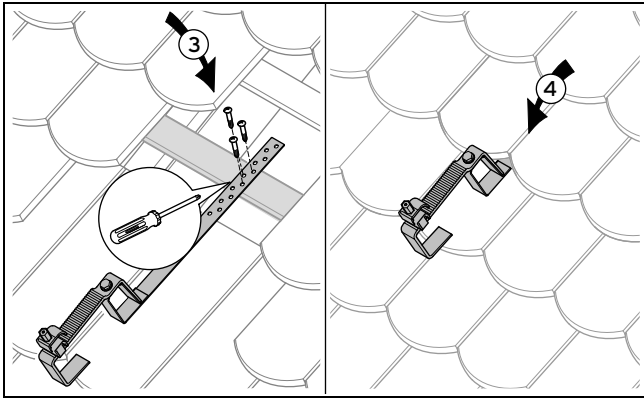


4. Screw the roof bracket onto the roof batten or rafters using the three screws supplied (3).
5. Slide the pantiles into their original position again (4).

4.2.1.3 Installing type S flat (for slate)

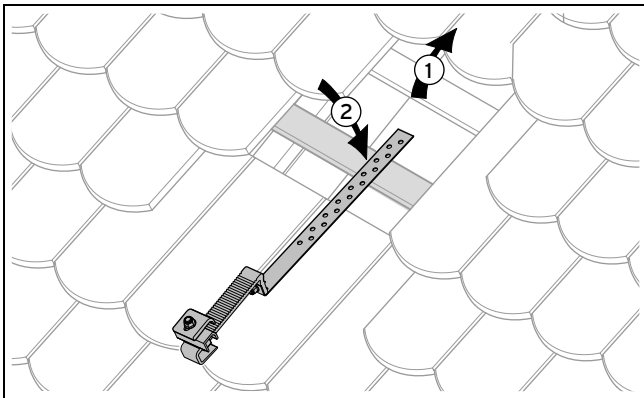


1. Define the clearances of the roof brackets. (→ Page 16)
2. At the appropriate position, expose the rafters or roof batten (1).
3. Position the roof bracket. Ensure that the top, middle and lower roof brackets (2) are positioned correctly.

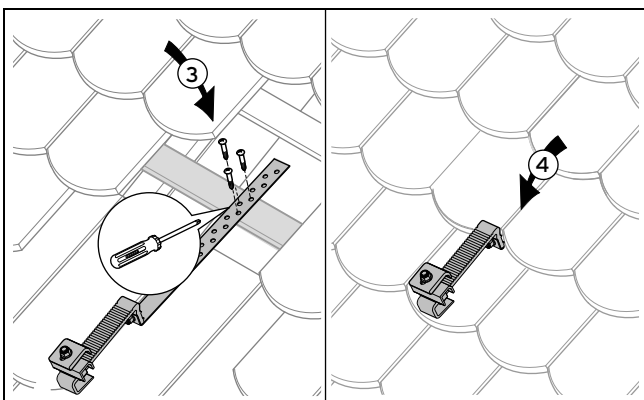


4. Screw the roof bracket onto the roof batten or rafters using the three screws supplied (3).
5. Slide the pantiles into their original position again (4).


4.2.1.4 Installing the hanger bolt type

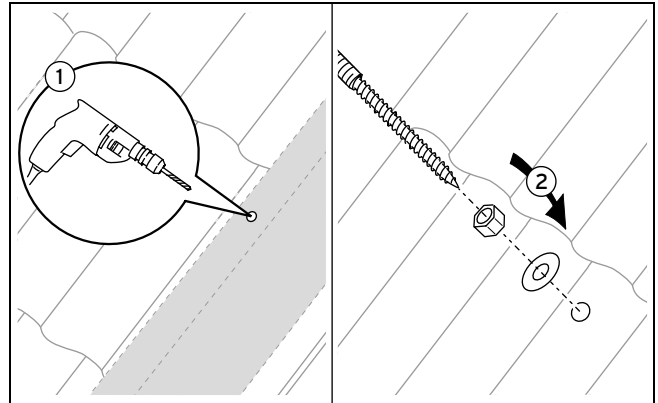

1. Define the clearances of the roof brackets. (→ Page 16)
2. At the corresponding position, drill a hole in the pantile (1).
3. Tighten the hanger bolt onto the rafters through the pantile (2).

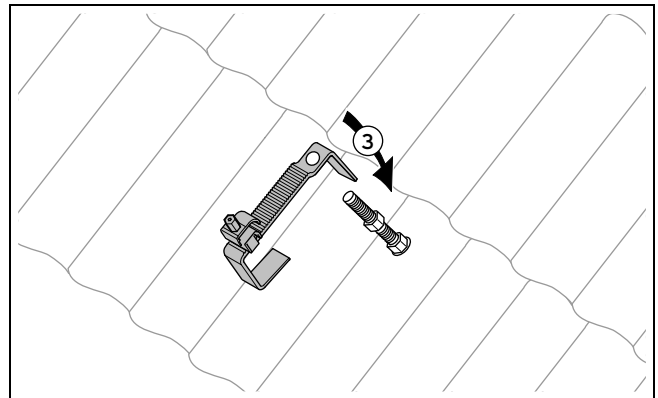

4. Position the central nut so that, after inserting the upper part of the roof bracket, the front contact area lies on the roofing (3). Ensure the correct positioning of the top, middle and lower roof brackets.

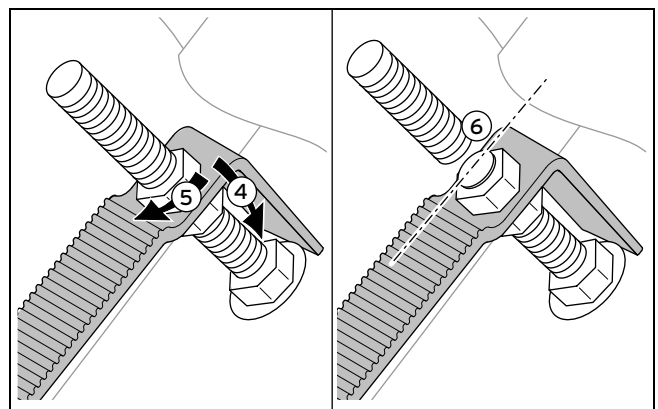

5. Position the roof bracket on the central nut (4).
6. Screw the second nut on and tighten (5).
– Working materials: SW 17 spanner
7. Disconnect the threaded rod directly above the nut (6).
8. Deburr the interface.

4.2.2 Installing collectors



Danger!

Personal injury and material damage due to a falling collector.

Improper fastening may cause a collector to fall.

- ▶ Tighten the clamping elements.
- ▶ Check for proper tensioning by shaking the clamping blocks.
- ▶ If a clamping block is mobile, tighten the nut again.


1. Install the collectors on the roof as specified in the following sections.



Note


Mounting rails and clamping elements cannot be moved at the same time.

Installing mounting rails

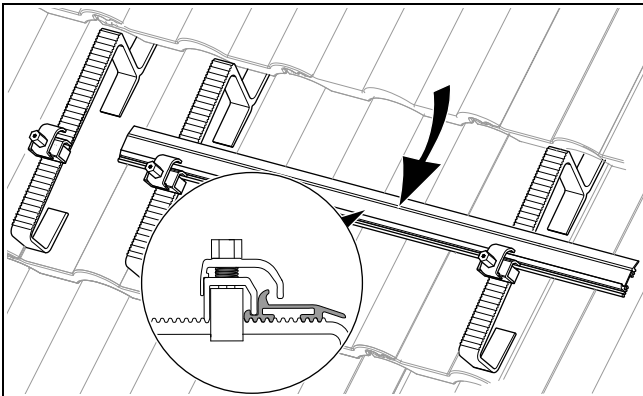


2. Secure the mounting rails with the clamping elements to the roof anchors.
3. Position the lower rail as far as possible downwards on the roof bracket.

Connecting mounting rails

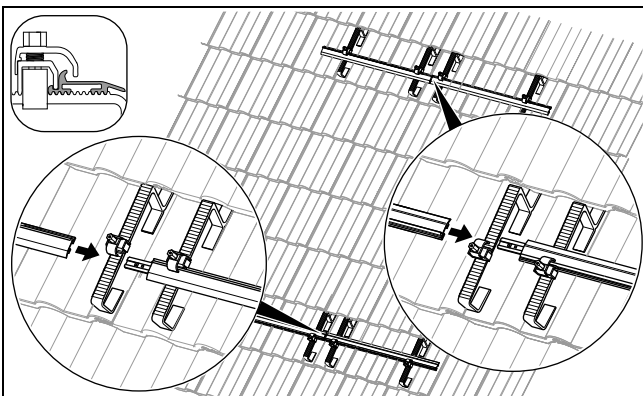


4. Insert the connecting elements laterally into the mounting rails until you feel them engage.
5. Connect the mounting rails underneath each other.
6. Secure the mounting rails with the clamping elements to the roof anchors.

Taring mounting rails

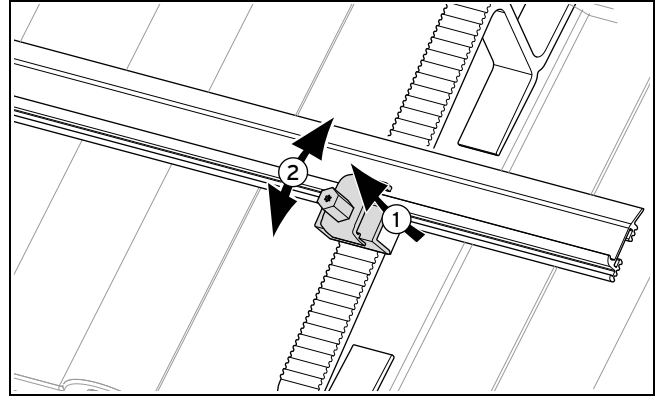

7. Secure the mounting rails horizontally.
8. Compensate for any height differences by moving the clamping elements.
9. To do this, pull the clamping element upwards (1), move it (2) and release it so that it engages.

Laying and hooking collectors

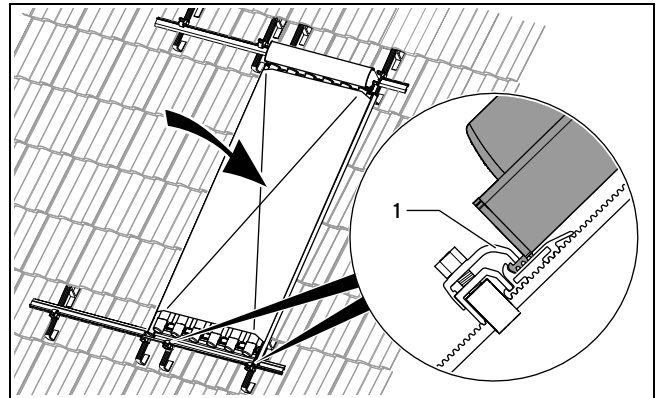

Danger!

Risk of burns and scalding!


In the event of solar radiation inside the units, collectors can reach 300 °C.

- ▶ Avoid working in direct sunlight.
- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.

10. Position the collector on the lower mounting rail (top collector).
 11. Hook the collector in on the clamping elements.
 12. Ensure that the top clamping block (1) of the clamping element is above the rail of the collector.
 13. Tighten the clamping elements of the lower mounting rail.
- Working materials: SW 13 spanner


4 On-roof fitting and installation

Loosening the sun protection film

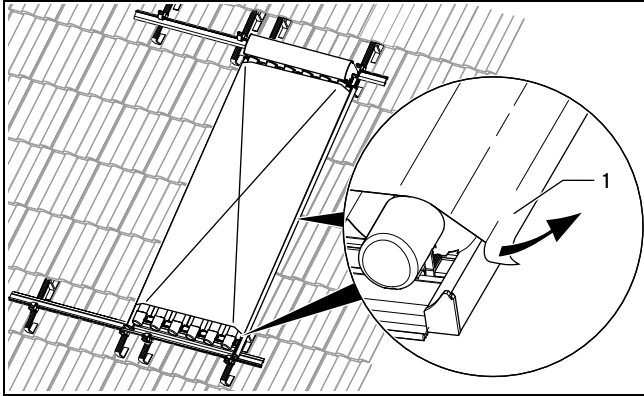


14. To ensure that the sun protection film can be easily removed after starting up the unit, loosen the sun protection film from the edges of the collector.

Removing the carrying strap

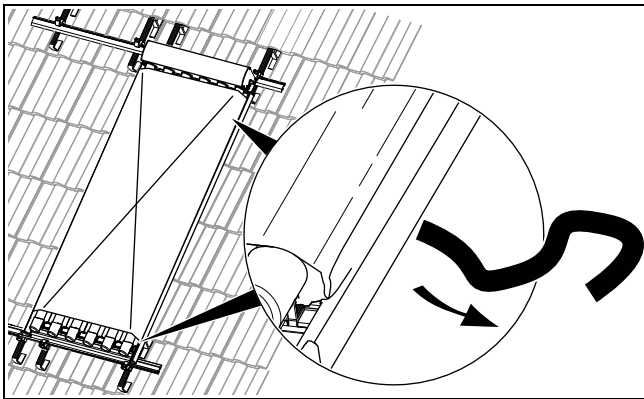


15. Remove the carrying strap.

Installing additional collectors

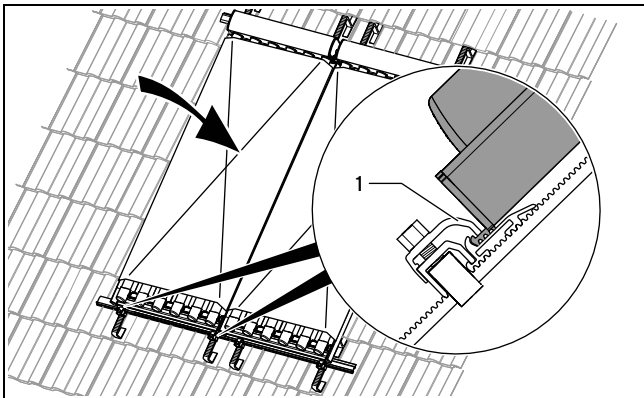


16. Position the next collector on the lower mounting rail.
17. Ensure that the upper clamping block (1) of the clamping element is above the rail of the collector.

Fitting connectors

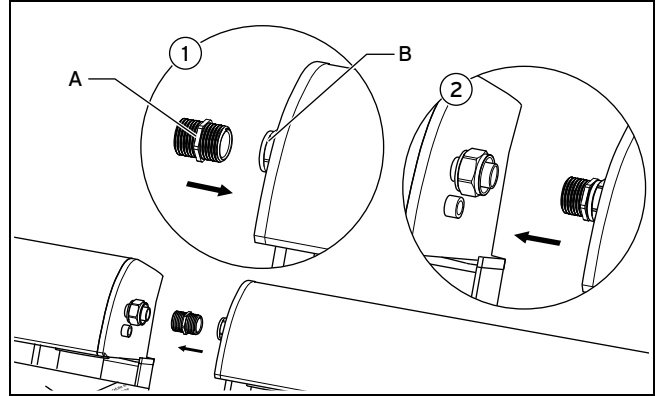

18. Screw the double nipple (A) (from installation set VTK extension set, article number 0020076779) in the thread of the second collector (B) with the cap nut (2) of the first collector.
19. Push the collectors together.

Tightening the clamping ring connection

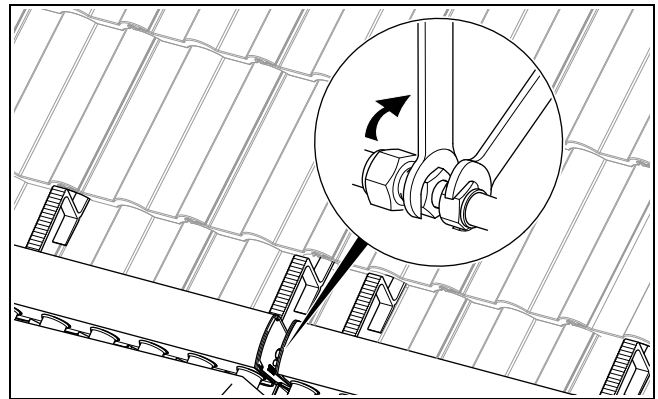

Caution.

Risk of damage to the collectors as a result of improper installation.

If the hydraulic connections are not installed properly, the stainless steel tubes inside the collector may become damaged.


- When tightening the clamping ring connection, hold a second spanner against it.

20. Screw the two cap nuts securely onto the double nipple.
21. Tighten the clamping elements of the lower mounting rail.
– Working materials: SW 13 spanner

Completing collector rows

22. Install an additional collector. (→ Page 22)
23. Fit the connectors. (→ Page 22)
24. Tighten the clamping ring on the connection for both collectors. (→ Page 22)


Positioning the top mounting rails

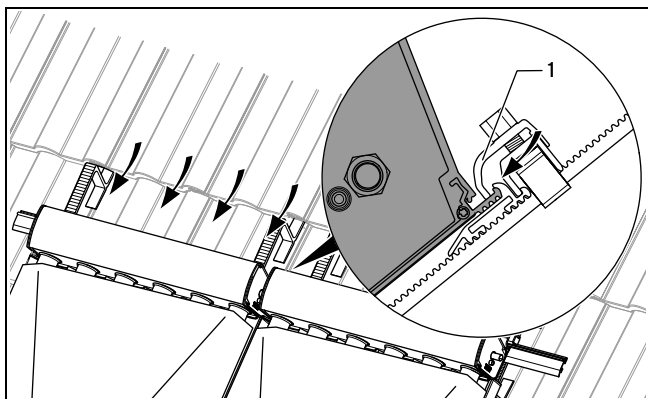

25. Slide the upper mounting rails until they are flush with the collectors.
26. Ensure that the clamping block (1) of the clamping elements lies over the collector rails.
27. Tighten the clamping elements of the top mounting rails.
 - Working materials: SW 13 spanner

Positioning the central mounting rail


Conditions: Collector rows: 2 ... 3

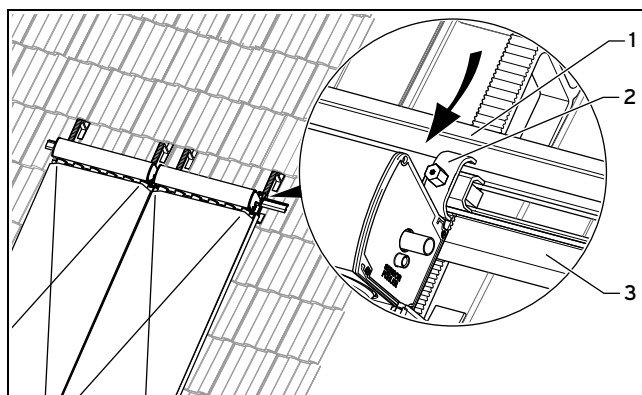

- ▶ Slide the central mounting rail until it is flush with the lower collector (3).
- ▶ Ensure that the top clamping block of the clamping element (2) is above the edge of the collector.
- ▶ Secure the mounting rail (1) for the next collector row to the clamping element.


Installing the upper collectors

Conditions: Collector rows: 2 ... 3

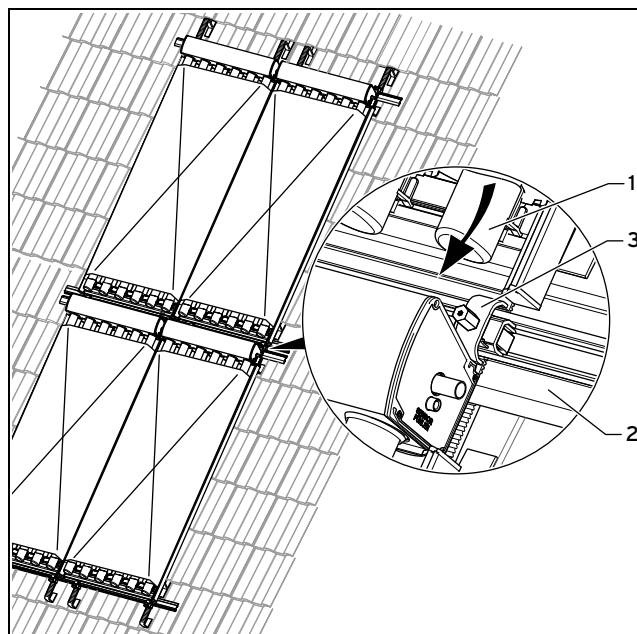

- ▶ Place the upper collector (1) into the central mounting rail (2).
- ▶ Tighten the clamping elements (3) of the central rail.
 - Working materials: SW 13 spanner
- ▶ Install the collector row in the same way as for the first collector row.
- ▶ Complete the collector row. (→ Page 22)
- ▶ Position the top mounting rails. (→ Page 23)

4.2.3 Installing hydraulic connections

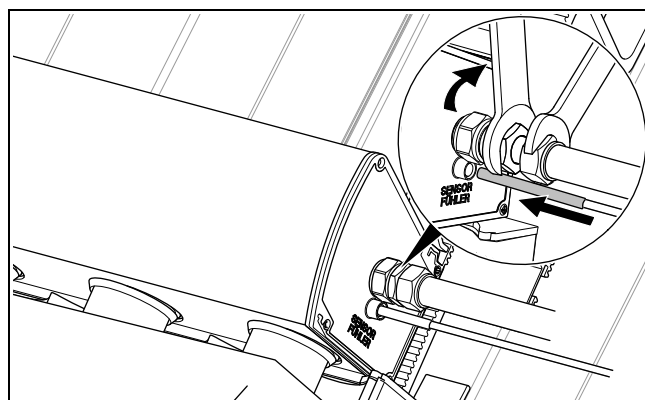

Caution.

Lack of tightness due to incorrect accessories.

Incorrect accessories may result in lack of tightness of the solar circuit and cause material damage.

- ▶ Only work in the solar circuit with hard soldered connections, flat seals, compression fittings or press fittings which have been approved by the manufacturer for

4 On-roof fitting and installation

use in solar circuits and at correspondingly high temperatures.



Caution.

Risk of damage to the collectors as a result of improper installation.

If the hydraulic connections are not installed properly, the stainless steel tubes inside the collector may become damaged.

- When tightening the clamping ring connection, hold a second spanner against it.

1. Connect the collector flow and return to the system with the connection tubes.

Conditions: System with collector sensor

- Insert the collector sensor into the opening provided on the collector flow side ("hot side").



Note


In general, the collector sensor can be attached to the right or left side of the collector field because the collectors on both sides have a corresponding opening.

Conditions: Collector rows: 2 ... 3

- Connect the collectors in accordance with the connection regulations (→ Page 10).
- Connect the collector flow and return to the system with the connection tubes.
- To do this, connect the clamping ring connection (from the installation set **VTK** basic set, article number 0020076776) to the collector.
- Connect the clamping ring connection with the connection pipework.
- Check the connections for tightness.

Insulating hydraulic connections

Conditions: Start-up carried out

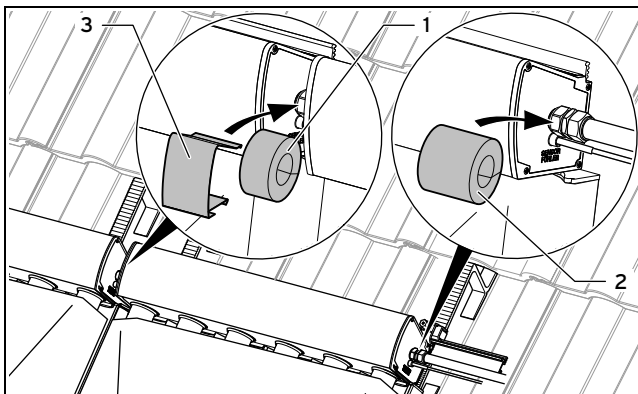

- Insulate the hydraulic connections using the insulation **(1)** (from installation set **VTK** extension set, article number 0020076779).
- Cover the insulation with the cover plate **(3)** (from installation set **VTK** extension set, article number 0020076779).

- Insulate the hydraulic system connections using the insulation **(2)** (from installation set **VTK** extension set, article number 0020076779).

4.3 Completing and checking the installation

4.3.1 Checking installation

Use the following checklist to ensure that all work steps have been performed.

Operations	Yes	No	Comments
All hydraulic connections tightened	<input type="checkbox"/>	<input type="checkbox"/>	
Hydraulic connections routed correctly	<input type="checkbox"/>	<input type="checkbox"/>	
VR 11 collector sensor connected (Only for systems WITH a collector sensor)	<input type="checkbox"/>	<input type="checkbox"/>	
All clamping elements tightened	<input type="checkbox"/>	<input type="checkbox"/>	
Collectors connected to lightning protection device (Optionally for lightning protection device)	<input type="checkbox"/>	<input type="checkbox"/>	
Pressure testing performed (Ideally with compressed air)	<input type="checkbox"/>	<input type="checkbox"/>	
All connections tight	<input type="checkbox"/>	<input type="checkbox"/>	

	Date	Signature
All installation work has been performed correctly.	.. ' .. ' ..	

5 Flat roof fitting and installation

4.3.2 Disposing of the packaging

The transport packaging consists largely of recyclable materials.

- ▶ Observe the applicable regulations.
- ▶ Dispose of the transport packaging properly.

5 Flat roof fitting and installation

- ▶ When fitting and installing the collectors, you must observe the chapter "Safety".


5.1 Preparing for fitting and installation

5.1.1 Delivery, transport and positioning

5.1.1.1 Storing collectors

- ▶ To prevent moisture from penetrating into the collector, always store the collectors dry and in a weatherproof area.

5.1.1.2 Checking the scope of delivery

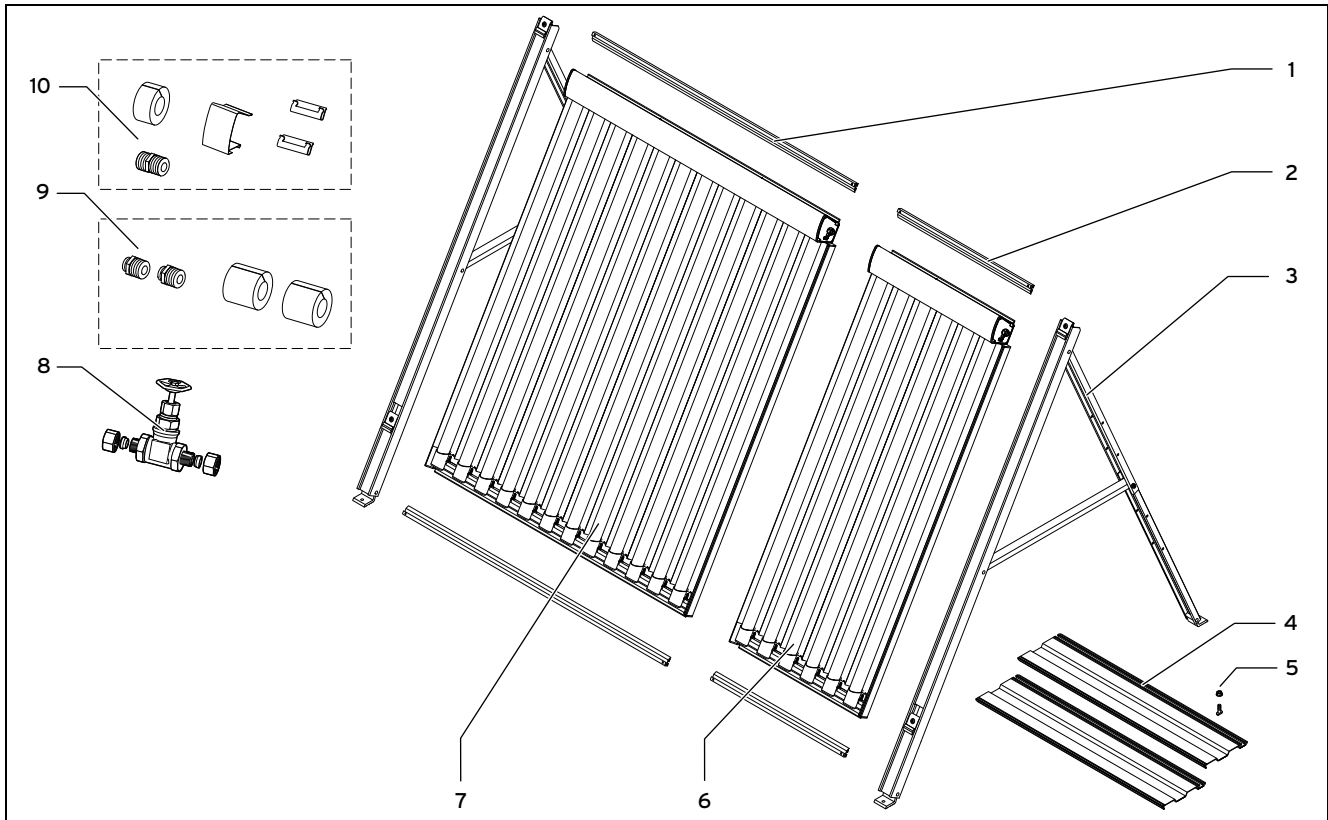

List of materials for flat roof installation

1	VTK 1140/2 rail set, 2 units	6	VTK 570/2 tube collector, 1 unit
2	VTK 570/2 rail set, 2 units	7	VTK 1140/2 tube collector, 1 unit
3	Frame set, 1 unit	8	Stop valve, 2-way VTK for parallel connection, 1 unit
4	Load plates from load plate set, 4 units	9	VTK installation set (basic set), 1 unit
5	Hammer-head bolt and nut from load plate set, 2 units	10	VTK installation set (extension set), 1 unit

► Use the image to check that the installation sets are complete.

5 Flat roof fitting and installation

5.1.1.3 Transporting collectors

1. To protect the collectors against damage, always transport them when they are standing horizontally.
2. Transport the collectors to the roof using suitable aids.


5.1.2 Complying with clearances and installation clearances

During storms, strong wind forces occur along the edges of flat roofs.

- When defining the installation position, maintain an edge clearance of at least 1 m from the roof edge.


5.1.3 Selecting suitable connection

- Select the appropriate connection for the collectors.

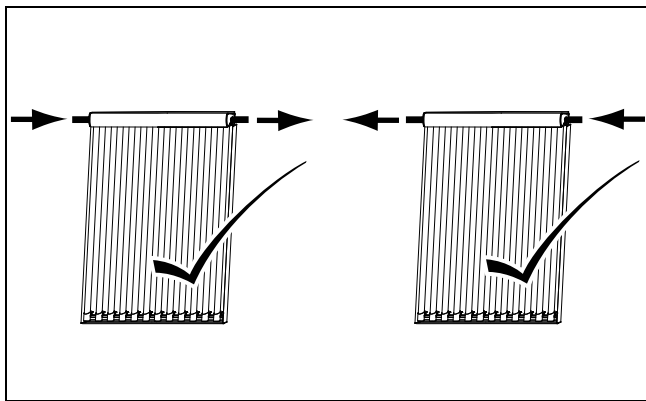


- Ensure that the solar fluid flows through the collectors either from left to right or from right to left.

Conditions: Number of VTK 1140/2 collectors: 1 ... 7

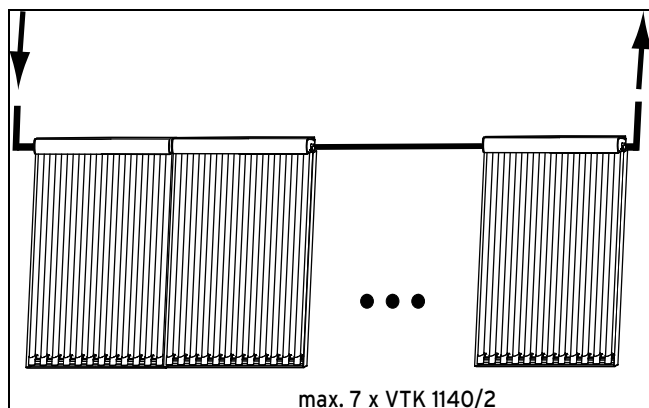

- Switch up to 7 VTK 1140/2 units in series (according to the 14 m² aperture surface area).

Conditions: Parallel connection, aperture surface area: $\leq 7 \text{ m}^2$

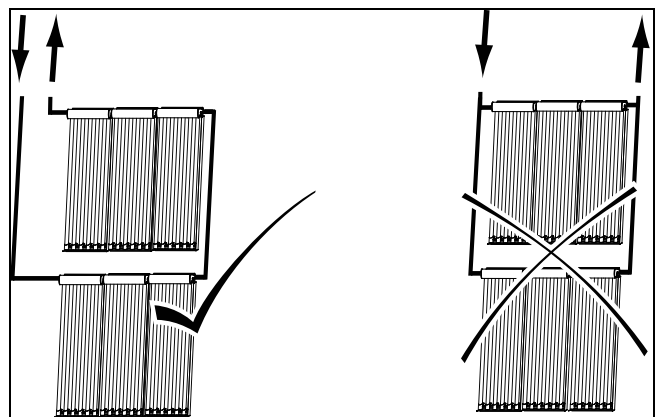


- Always connect as many collectors as possible in series, even when several collector rows are arranged on top of each other.



Note


Up to an aperture surface area of 7 m² (accordingly for 3 pcs VTK 1140/2 + 1 pc VTK 570/2), you must switch the collectors in series.

Conditions: Parallel connection, aperture surface area: $\geq 14 \text{ m}^2$

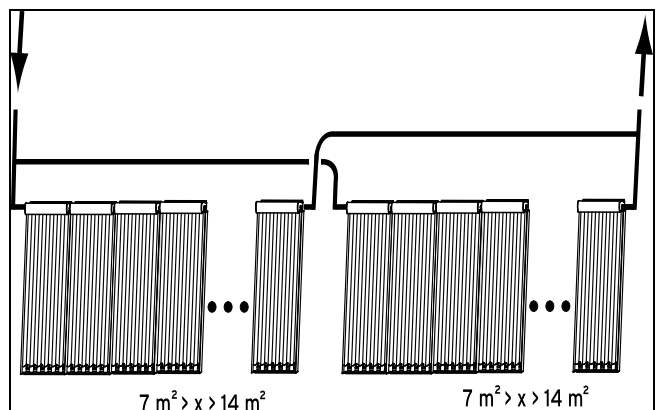

- Set up several parallel collector rows and connect these hydraulically in parallel.
- Always connect as many collectors (at least 7 m²) as possible in series.

Conditions: Parallel connection

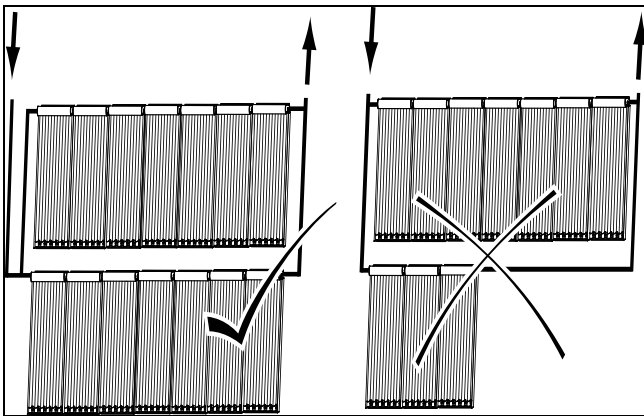

- ▶ To avoid pressure losses in the sub-collector fields, only use parallel connection for collector rows with the same number of collectors.
- ▶ Ensure that each sub-collector field has the same total tube length in the flow and return (Tichelmann system), in order to avoid pressure losses in the connection tubes.

Installation variants	Meaning
A	Floating installation with load plates and load weights.
B	Floating installation without load plates. The rack must be screwed onto suitable load weights.
C	Rack screwed directly onto the roof.

5.1.4 Preparing the roof duct



Caution.


Lack of tightness due to destruction of the roof skin.

In the event of destruction of the roof skin, water may penetrate the building.

- ▶ Ensure adequate protection of the roof skin during installation on roof sealing surfaces.
- ▶ Place large-area building protection mats underneath the installation system.
- ▶ After installation, check the tightness of the building shell where there are directly connected racks.

- ▶ Commission a roofer to prepare the roof duct.

5.1.5 Selecting the installation variant

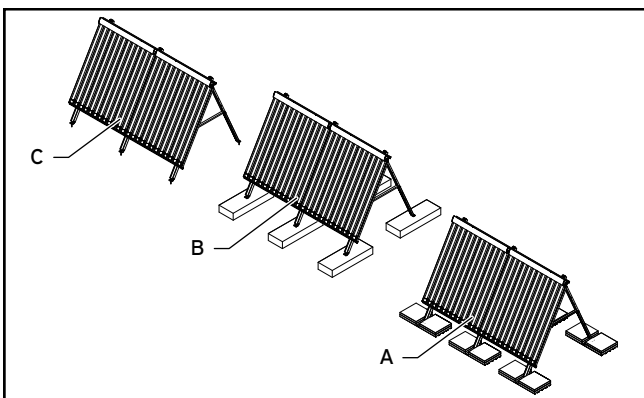

- ▶ Make a selection from the three available installation variants:

5 Flat roof fitting and installation

5.1.6 Putting together components

- Use the following table to put together the components for installation.

Number of VTK 1140/2 collectors	1	2	3	4	5	6	7
Components	Required sets/quantity						
VTK installation set (basic set)	1 ¹⁾						
VTK installation set (basic set)	–	1	2	3	4	5	6
Installation set for open-air/flat-roof installation	2	3	4	5	6	7	8
Required rack	2	3	4	5	6	7	8
Rail set (2 pcs), VTK 1140/2	1	2	3	4	5	6	7
¹⁾ 1 set each per collector field for connecting to the pipelines; the collectors are connected together using the extension set							

Number of VTK 1140/2 collectors	1	2	3	4	5	6
Number of VTK 570/2 collectors	1	1	1	1	1	1
Components	Required sets/quantity					
VTK installation set (basic set)	1 ¹⁾					
VTK installation set (extension set)	1	2	3	4	5	6
Installation set for open-air/flat-roof installation	3	4	5	6	7	8
Required rack	3	4	5	6	7	8
Rail set (2 pcs), VTK 1140/2	1	2	3	4	5	6
Rail set (2 pcs), VTK 570/2	1					
¹⁾ 1 set each per collector field for connecting to the pipelines; the collectors are connected together using the extension set						

5.1.7 Determining the ballast load (floating installation)



Danger!

Risk of death and material damage due to excessive basic wind speeds!

The racks are designed for basic wind speeds of up to 108 km/h. If the basic wind speed at the site is greater than 108 km/h, then there can be no guarantee claim for the system.

- Only install the rack in locations where the basic wind speed is a maximum of 108 km/h.

1. Please note the following for floating installation:


Installation variants	Please note
B	Weights that are firmly screwed onto the rack must consist of material capable of screw connections.
A and B	All weights must be weatherproof.

2. For detailed determination of the basic wind speed at the site and the required weights for the rack, use the Vaillant tool for dimensioning the wind and snow loads.
 3. For quick determination of the basic wind speed at the site, use the following map.
 4. For quick dimensioning of the required weights, use the following tables.




Note

The map and tables are used for quick dimensioning of the ballast loads. Detailed dimensioning of the ballast loads is only possible using the Vaillant tool for dimensioning the wind and snow loads. If you have any questions on this subject, please contact your responsible Vaillant sales partner.

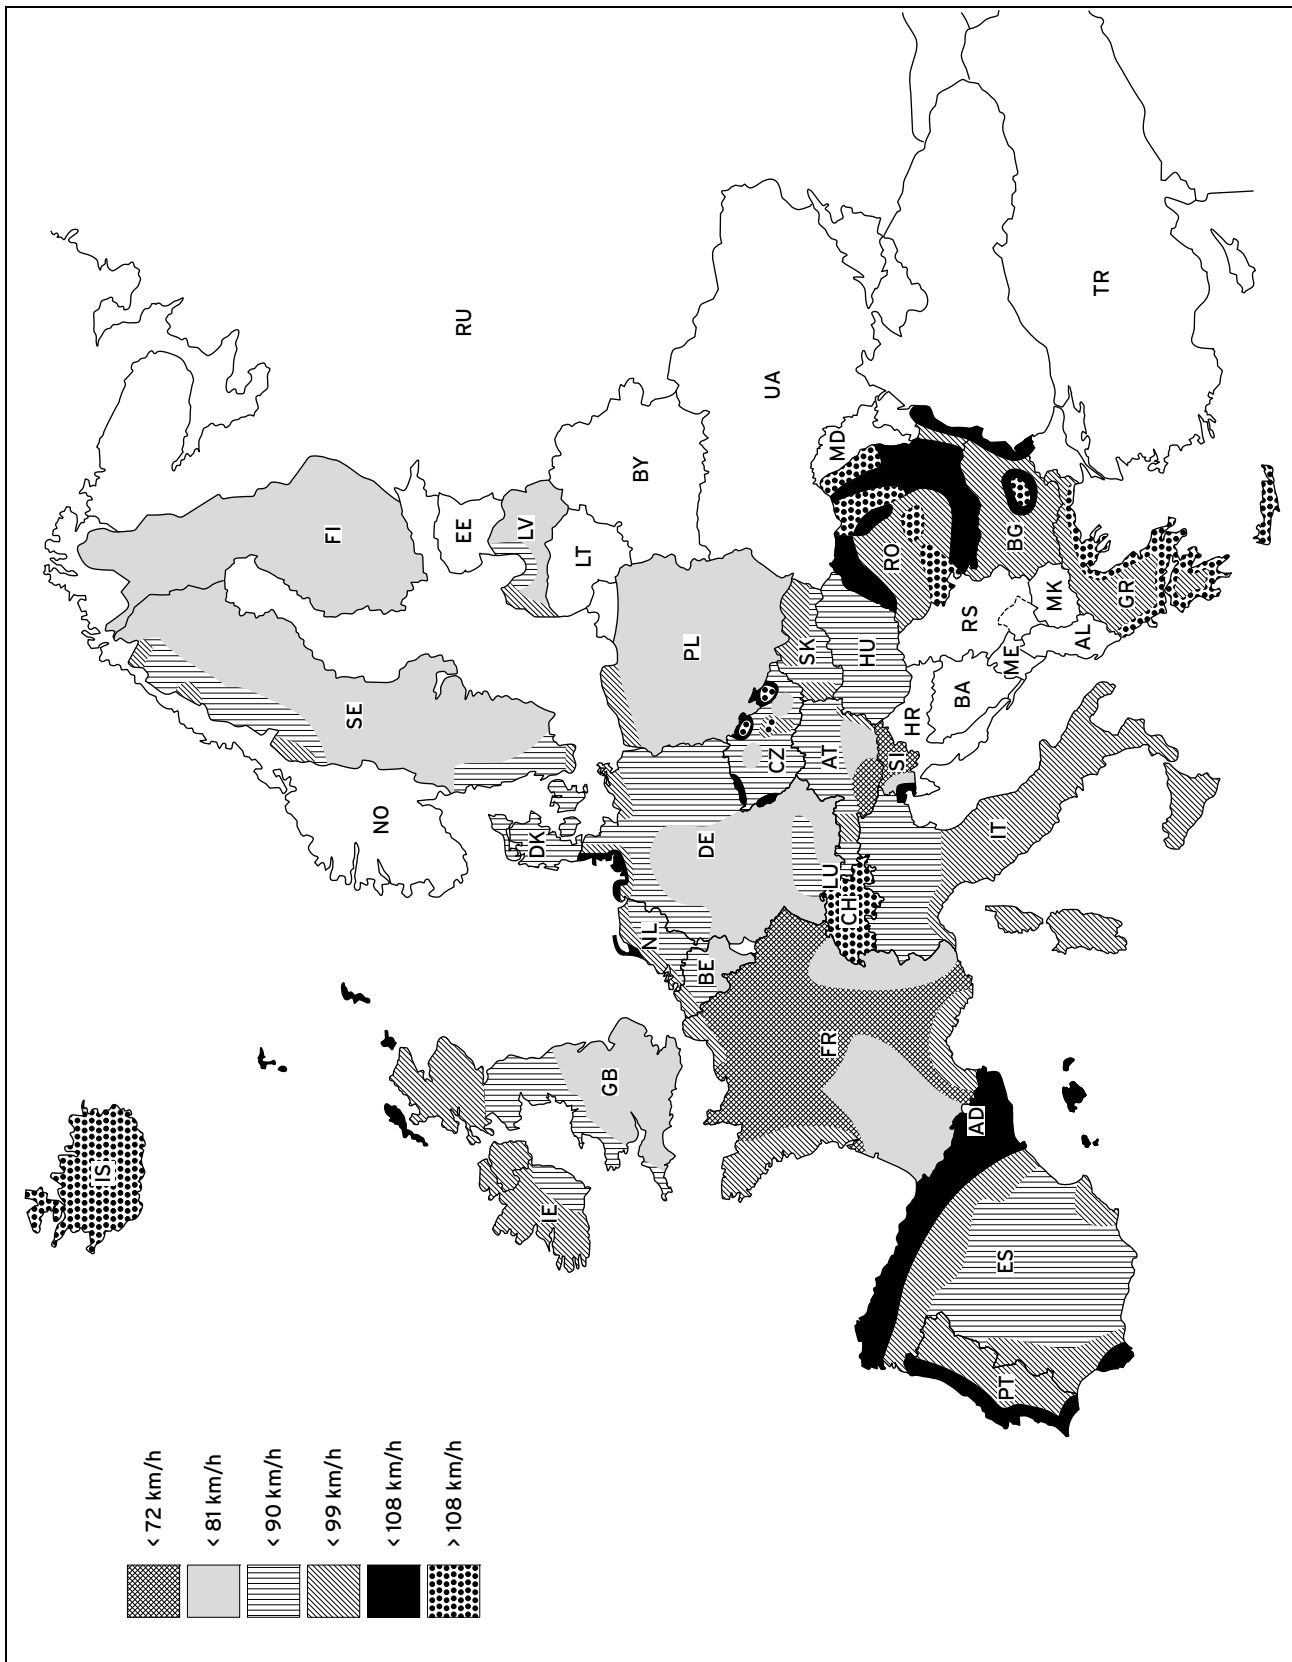


5. Use the map to determine the basic wind speed at the site.


5 Flat roof fitting and installation

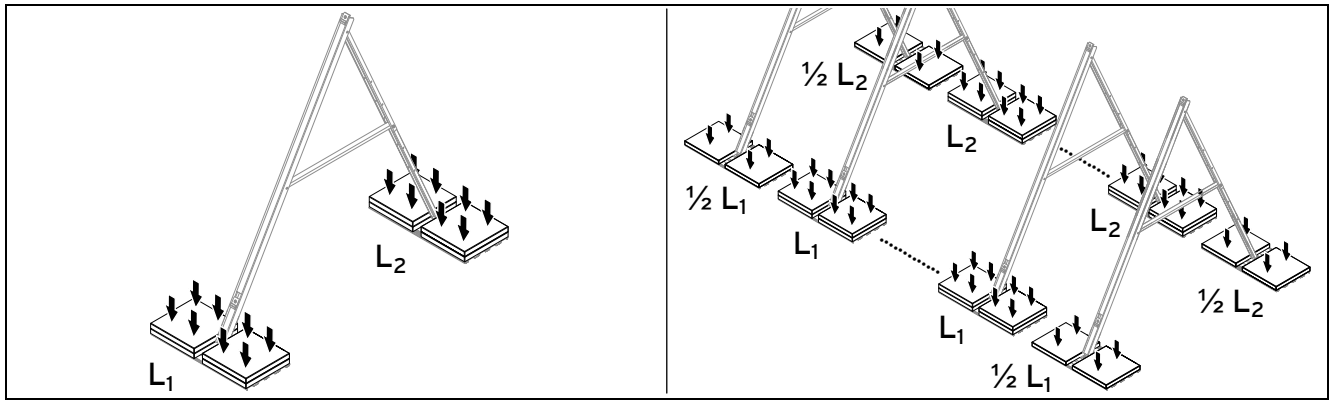


6. Use the tables to determine the required weights.

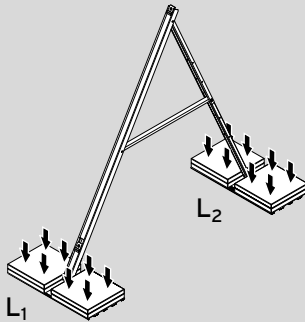
Horizontal collector position Installation angle 30°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Inland	L ₁	286	359	407	30	38	45
		L ₂	184	235	269	184	235	269
up to 72	Coast and islands	L ₁	392	461	505	43	53	59
		L ₂	259	307	345	259	307	338
up to 81	Inland	L ₁	339	445	515	35	50	61
		L ₂	221	296	345	221	296	345
up to 81	Coast and islands	L ₁	499	588	643	58	71	79
		L ₂	334	396	435	334	396	435
up to 90	Inland	L ₁	445	550	621	50	66	76
		L ₂	296	370	419	296	370	419
up to 90	Coast and islands	L ₁	586	691	762	71	86	96
		L ₂	395	469	518	395	469	518
up to 99	Inland	L ₁	550	656	762	66	81	96
		L ₂	370	444	518	370	444	518
up to 99	Coast and islands	L ₁	727	833	903	91	107	117
		L ₂	494	568	617	494	568	617
up to 108	Inland	L ₁	656	797	903	81	101	117
		L ₂	444	543	617	444	543	617
up to 108	Coast and islands	L ₁	868	974	1079	112	127	142
		L ₂	593	667	741	593	667	741


Flat roof fitting and installation 5

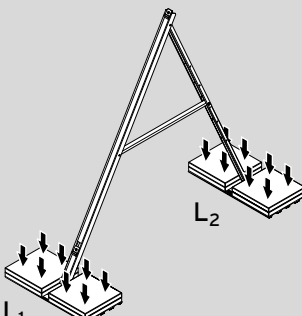
Horizontal collector position Installation angle 45°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	18-25 m	18-25 m
up to 72	Inland	L ₁	299	372	421	30	30	30
		L ₂	213	274	314	191	242	276
up to 72	Coast and islands	L ₁	406	476	521	30	30	30
		L ₂	301	359	396	265	315	346
up to 81	Inland	L ₁	352	495	531	30	30	30
		L ₂	257	345	404	228	303	352
up to 81	Coast and islands	L ₁	515	604	661	30	30	30
		L ₂	391	464	510	341	404	443
up to 90	Inland	L ₁	459	566	638	30	30	30
		L ₂	345	433	492	303	377	427
up to 90	Coast and islands	L ₁	602	709	781	30	30	30
		L ₂	462	550	609	402	477	526
up to 99	Inland	L ₁	566	673	781	30	30	30
		L ₂	433	521	609	377	452	526
up to 99	Coast and islands	L ₁	745	852	923	30	30	30
		L ₂	579	667	726	502	576	626
up to 108	Inland	L ₁	673	816	923	30	30	30
		L ₂	521	638	726	452	551	626
up to 108	Coast and islands	L ₁	888	995	1102	30	30	30
		L ₂	697	785	873	601	675	750

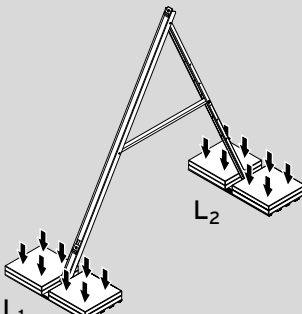
Horizontal collector position Installation angle 60°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Inland	L ₁	268	334	378	30	37	45
		L ₂	297	377	430	196	247	281

5 Flat roof fitting and installation

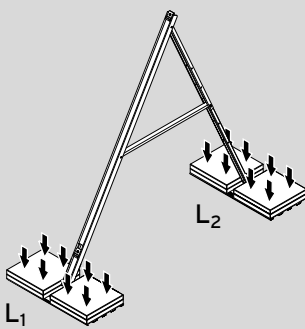
Horizontal collector position Installation angle 60°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Coast and islands	L ₁	365	430	474	43	54	62
		L ₂	414	491	539	271	320	351
up to 81	Inland	L ₁	316	413	484	33	52	64
		L ₂	355	472	550	233	308	357
up to 81	Coast and islands	L ₁	468	557	613	61	76	85
		L ₂	532	630	691	346	408	448
up to 90	Inland	L ₁	413	519	590	52	70	82
		L ₂	472	589	667	308	382	432
up to 90	Coast and islands	L ₁	555	661	731	76	94	106
		L ₂	628	744	822	407	481	531
up to 99	Inland	L ₁	519	625	731	70	88	106
		L ₂	589	705	822	382	456	531
up to 99	Coast and islands	L ₁	696	802	873	100	118	130
		L ₂	783	900	978	506	580	630
up to 108	Inland	L ₁	625	767	873	88	112	130
		L ₂	705	861	978	456	556	630
up to 108	Coast and islands	L ₁	838	944	1050	124	142	160
		L ₂	939	1056	1172	605	680	754

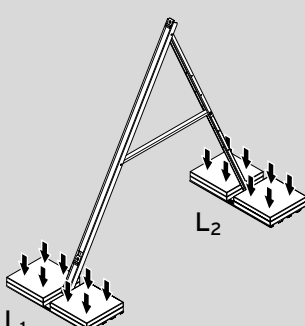
Vertical collector position Installation angle 30°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Inland	L ₁	301	378	429	44	40	70
		L ₂	167	213	244	167	213	244
up to 72	Coast and islands	L ₁	413	487	534	67	81	90
		L ₂	234	279	307	234	279	307

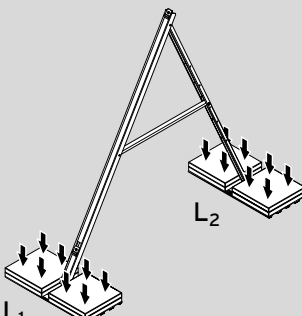
Vertical collector position Installation angle 30°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 81	Inland	L ₁	357	469	544	56	78	92
		L ₂	201	268	313	201	268	313
up to 81	Coast and islands	L ₁	527	621	680	89	108	119
		L ₂	303	359	395	303	359	395
up to 90	Inland	L ₁	469	581	656	78	100	115
		L ₂	268	335	380	268	335	380
up to 90	Coast and islands	L ₁	619	731	806	107	129	144
		L ₂	358	425	470	358	425	470
up to 99	Inland	L ₁	581	694	806	100	122	144
		L ₂	335	403	470	335	403	470
up to 99	Coast and islands	L ₁	768	881	955	137	159	174
		L ₂	448	515	560	448	515	560
up to 108	Inland	L ₁	694	843	955	122	152	174
		L ₂	403	492	560	403	492	560
up to 108	Coast and islands	L ₁	918	1030	1143	166	188	211
		L ₂	537	605	672	537	605	672

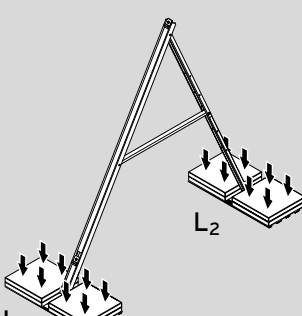Vertical collector position Installation angle 45°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Inland	L ₁	321	401	454	30	30	30
		L ₂	191	245	281	173	220	251
up to 72	Coast and islands	L ₁	437	513	562	30	30	30
		L ₂	270	321	354	241	286	314
up to 81	Inland	L ₁	379	495	572	30	30	30
		L ₂	230	309	361	207	275	320

5 Flat roof fitting and installation

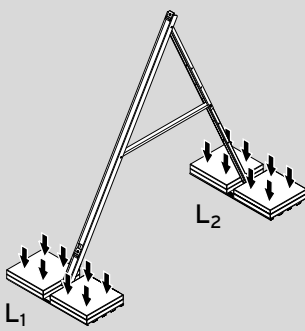
Vertical collector position Installation angle 45°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 81	Coast and islands	L ₁	555	652	713	30	30	30
		L ₂	350	415	4547	310	366	402
up to 90	Inland	L ₁	495	611	688	30	30	30
		L ₂	309	388	440	275	342	388
up to 90	Coast and islands	L ₁	650	766	843	30	30	30
		L ₂	414	493	545	365	433	478
up to 99	Inland	L ₁	611	727	843	30	30	30
		L ₂	388	466	545	342	410	478
up to 99	Coast and islands	L ₁	804	920	998	30	30	30
		L ₂	519	598	650	455	523	568
up to 108	Inland	L ₁	727	882	998	30	30	30
		L ₂	466	571	650	410	500	568
up to 108	Coast and islands	L ₁	959	1075	1191	30	30	34
		L ₂	624	703	781	546	613	681

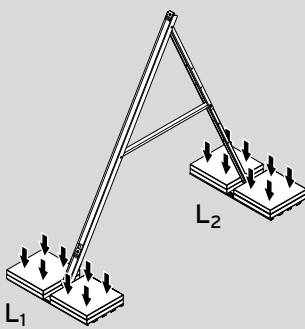Vertical collector position Installation angle 60°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 72	Inland	L ₁	297	372	421	30	30	37
		L ₂	267	339	387	179	225	256
up to 72	Coast and islands	L ₁	406	477	522	30	30	35
		L ₂	372	441	485	246	291	325
up to 81	Inland	L ₁	352	460	532	30	30	37
		L ₂	319	424	494	212	280	325
up to 81	Coast and islands	L ₁	516	607	664	35	45	52
		L ₂	479	566	621	315	372	407

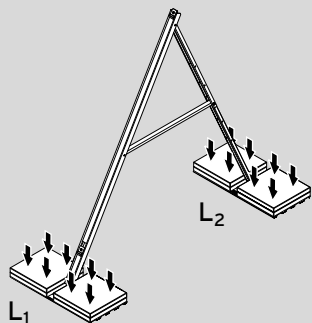Vertical collector position Installation angle 60°			Weights/rack [kg]					
			To secure against sliding and lifting			To secure only against lifting (if secured/anchored against sliding)		
			Note When there are at least two collectors in a row, the ballast loads can be reduced by half for the outer rack.					
Basic wind speed [km/h]		Position	Building height			Building height		
			up to 10 m	10-18 m	18-25 m	up to 10 m	10-18 m	18-25 m
up to 90	Inland	L ₁	460	568	641	30	41	49
		L ₂	424	529	599	280	348	393
up to 90	Coast and islands	L ₁	604	713	785	45	58	67
		L ₂	564	669	739	370	438	483
up to 99	Inland	L ₁	568	677	785	41	54	67
		L ₂	529	634	739	348	415	483
up to 99	Coast and islands	L ₁	749	857	930	62	75	84
		L ₂	704	809	879	461	528	573
up to 108	Inland	L ₁	677	821	930	54	71	84
		L ₂	634	774	879	415	506	573
up to 108	Coast and islands	L ₁	893	1002	1110	80	92	105
		L ₂	844	949	1054	551	619	686

5.1.8 Defining the rack clearances

Conditions: Installed collectors: VTK 1140/2

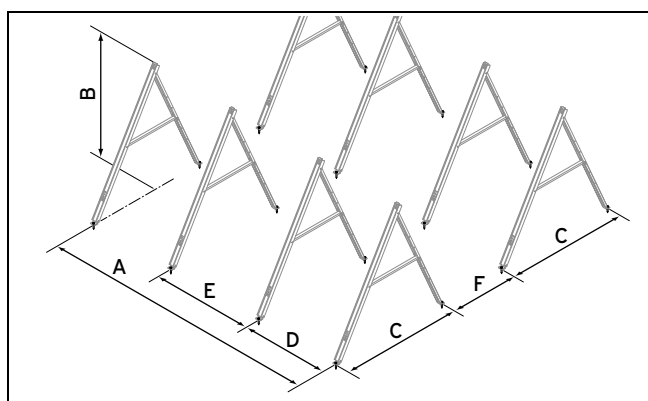

► Define the rack clearances.


Quantity	A	30°		45°		60°		C	D	E
		B	F ¹⁾	B	F ¹⁾	B	F ¹⁾			
1	1088	1106	2420	1476	3001	1749	3267	1684	–	–
2	2466								1233	1397
3	3863									
4	5260									
5	6657									
6	8054									

5 Flat roof fitting and installation

Quantity	A	30°		45°		60°		C	D	E
		B	F ¹⁾	B	F ¹⁾	B	F ¹⁾			
7	9451	1106	2420	1476	3001	1749	3267	1684	1233	1397

¹⁾ Sun elevation of 20° (winter sun)

Conditions: Installed collectors: VTK 570/2 and VTK 1140/2 in combination

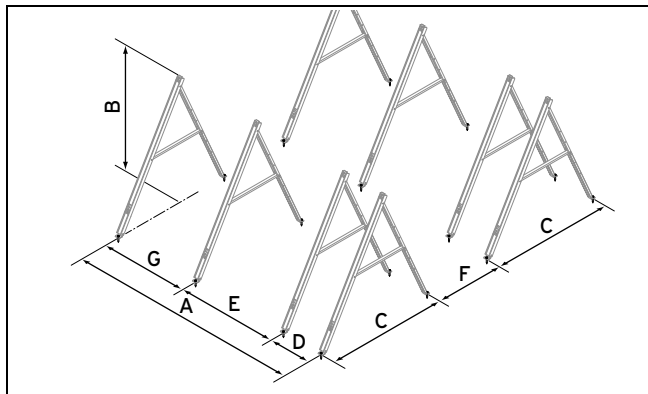

► Define the rack clearances.

Quantity		A	30°		45°		60°		C	D	E	G
VTK 570/2	VTK 1140/2		B	F ¹⁾	B	F ¹⁾	B	F ¹⁾				
1	1	1776	1106	2420	1476	3001	1749	3267	1684	543	1397	1233
1	2	3173										
1	3	4570										
1	4	5967										
1	5	7364										
1	6	8761										

¹⁾ Sun elevation of 20° (winter sun)

5.2 Carrying out the installation

5.2.1 Installing racks




Danger!

Risk of death due to falling collectors!


Unsecured collectors may fall from the flat roof due to the wind and present a danger to persons.

- ▶ Perform the following safety precautions according to the installation type.
- ▶ For direct connection, screw the rack properly onto the base.
- ▶ Only use suitable load weights.
- ▶ Observe the required ballast load of the load weights.


1. Determine the required number of racks.
 - For the first collector: Two racks
 - For each additional collector: One additional rack

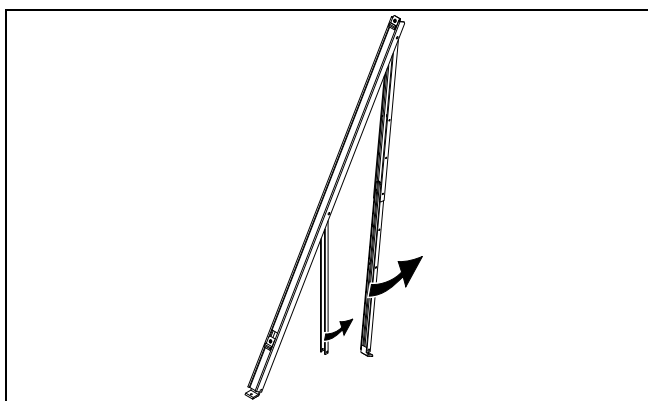


2. Fold out the first rack.

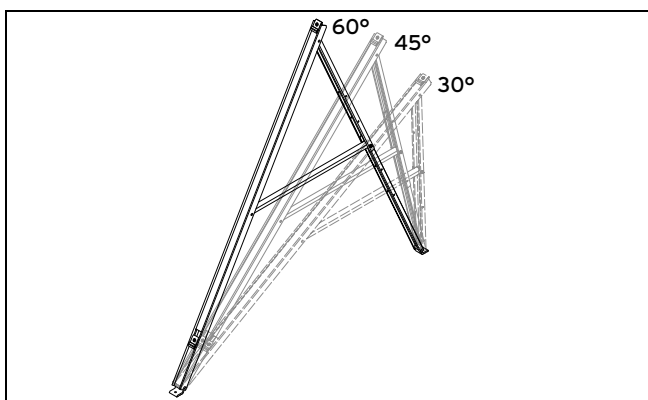

3. Select the required installation angle.
 - Installation angle:
 - 30°
 - 45°
 - 60°

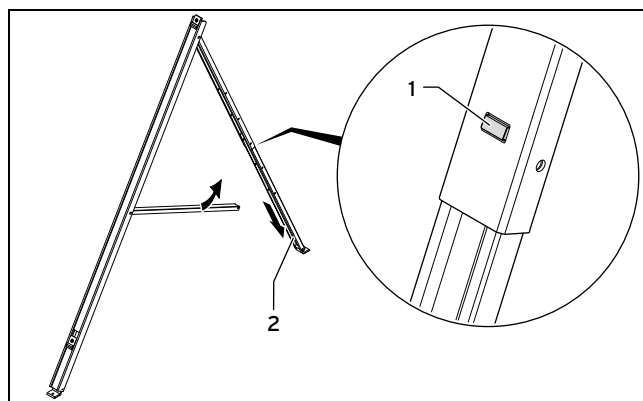


4. Push the locking button (1) on the telescopic rail.
5. Pull the telescopic rail (2) into the desired installation angle and allow the locking button to engage again.

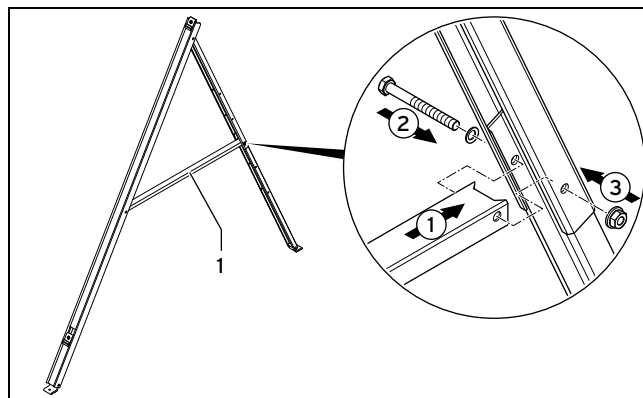

6. Position the crossbeams (1) such that their fastening holes lie between the corresponding threaded holes in the telescopic rail.
7. To secure the rack, insert the fixing screw (2) through all rails.
8. Secure the fixing screw (2) with the self-locking nuts (3).
9. Tighten the nuts.

Conditions: Type of installation: Direct mounting

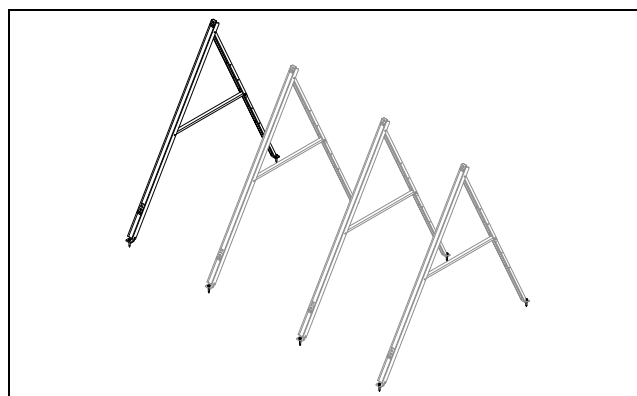

Screwing on the rack



Caution.

Lack of tightness due to destruction of the roof skin.

In the event of destruction of the roof skin, water can penetrate the building.


- ▶ Check the tightness of the roof skin after tightening screw connections.

5 Flat roof fitting and installation

- ▶ Restore the tightness of the roof skin if necessary.

- ▶ Define the required rack clearances as described in the chapter "Defining rack clearances".
- ▶ Drill the required holes at the defined positions.
- ▶ Secure the rack with fastenings appropriate to the base (diameter: at least 10 mm).
- ▶ Mount as many racks as you need to hold the collectors.

Conditions: Type of installation: Floating installation (with load plates)

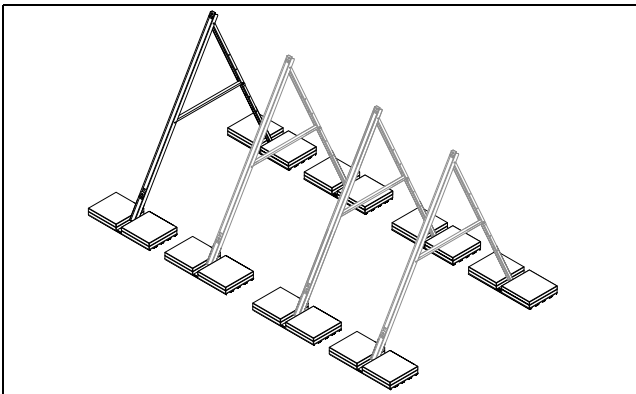

Preparing load plates




Caution.

Lack of tightness due to destruction of the roof skin.

In the event of destruction of the roof skin, water may penetrate the building.

- ▶ Ensure adequate protection of the roof skin during installation on roof sealing surfaces.
- ▶ Place large-area, non-slip building protection mats underneath the installation system.

- ▶ If the roof is covered with gravel, remove the gravel at the places where you wish to position the load plates, and use non-slip building protection mats to protect the roof skin.

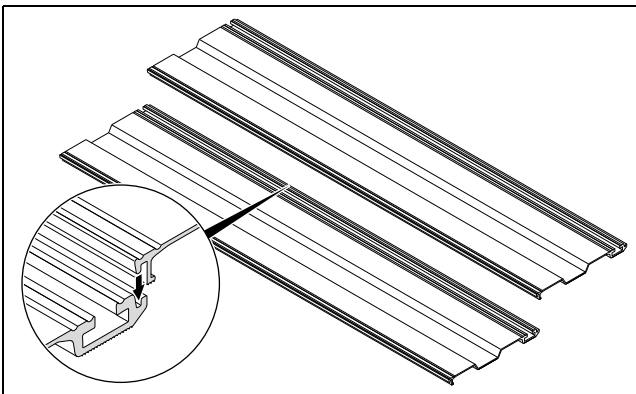


- ▶ Connect two load plates as shown in the illustration.
- ▶ Connect two additional load plates as shown in the illustration.




Note

For each rack, you will need four load plates: one pair each for the front and rear rack feet.

- ▶ Align the load plates approximately in their final position on the flat roof.

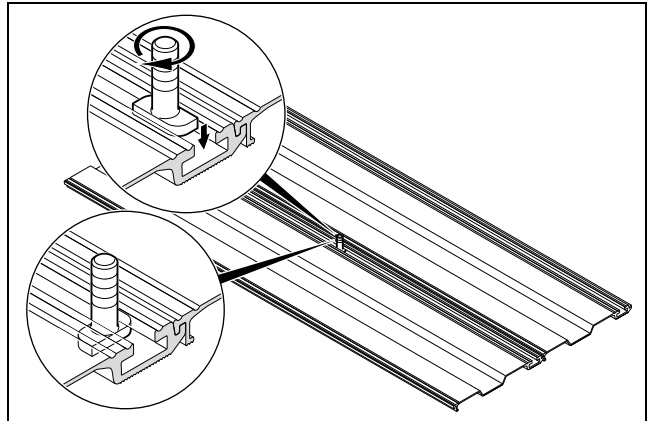


- ▶ Insert the first hammer-head bolt centrally in the groove between the first two load plates.
- ▶ To secure the hammer-head bolt, turn it by 90° in a clockwise direction.
- ▶ Secure the second hammer-head bolt in the same way between the other two load plates.

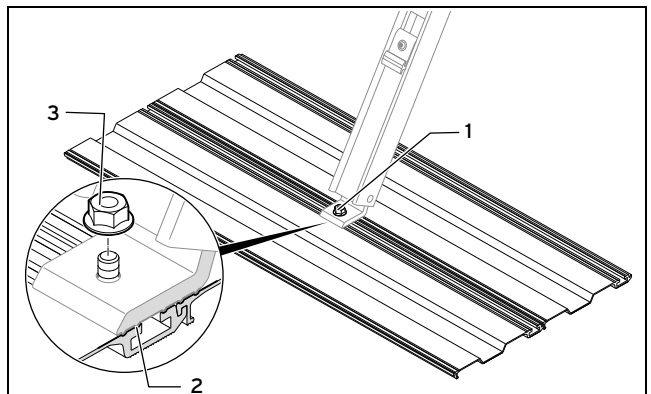

Screwing the rack onto load plates and aligning

- ▶ If you install the **VTK 570/2** collectors, turn the load plates by 90° so that the load plates do not overlap.
 - ▶ Take hold of the first rack that is already secured in the installation angle.
 - ▶ Position the front rack feet above the hammer-head bolt (1).
 - ▶ When positioning the rack feet, ensure that the anti-rotation lock (2) engages.
 - ▶ Secure the rack feet with the self-locking nut (3).
 - ▶ Secure the rear rack feet in the same way on the other two load plates.
- ◁ The first rack is installed so that it is stable.

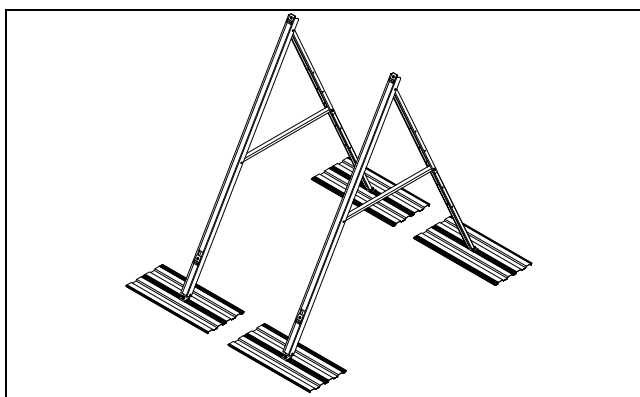


- Install the second rack on the load plates as described above.
- Mount as many racks and load plates as you need to hold the collectors.




Note

For one collector, you will need two racks.
For each additional adjacent collector, you will need an additional rack.

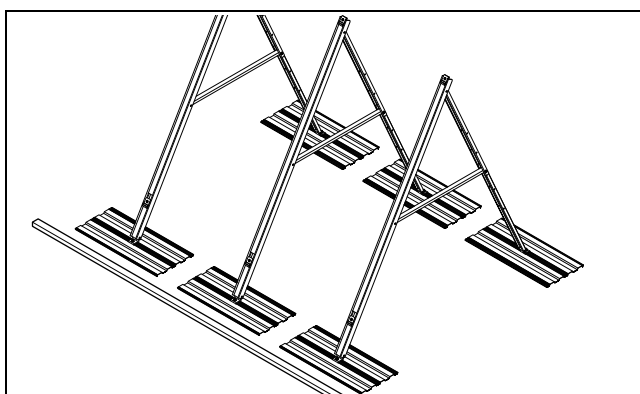

- Align all racks with the load plates in their final position on the flat roof.
- The rack clearances can be found in the chapter "Defining rack clearances".

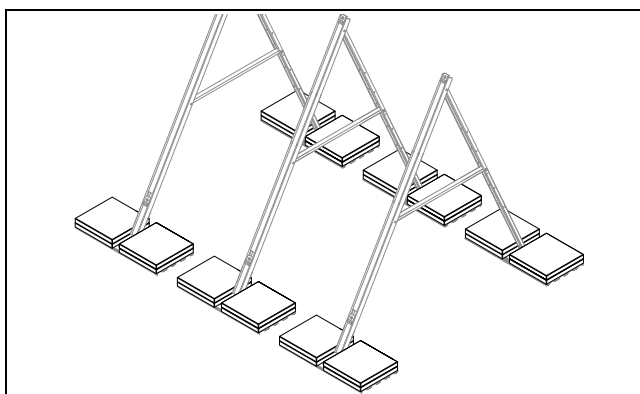

Placing load weights on load plates

- Transport the required number of loading weights to the flat roof.
- Place the load weights on the load plates as shown above.
- Ensure that the distance between the loading weights and the racks is as small as possible.



Danger!

Risk of death due to inadequate fastening of the load weights onto the load plates!

If the load weights are inadequately secured on the load plates, collectors could fall from the roof and cause life-threatening accidents.

- Secure all load weights on the load plates adequately against slipping and tilting.

- Distribute the load weights evenly over the load plates.

Conditions: Type of installation: Floating installation (without load plates)

Preparing weights




Caution.

Lack of tightness due to destruction of the roof skin.

In the event of destruction of the roof skin, water may penetrate the building.

- Ensure adequate protection of the roof skin during installation on roof sealing surfaces.
- Place large-area, non-slip building protection mats underneath the installation system.

- If the roof is covered with gravel, remove the gravel at the places where you wish to position the weights, and use non-slip building protection mats to protect the roof skin.

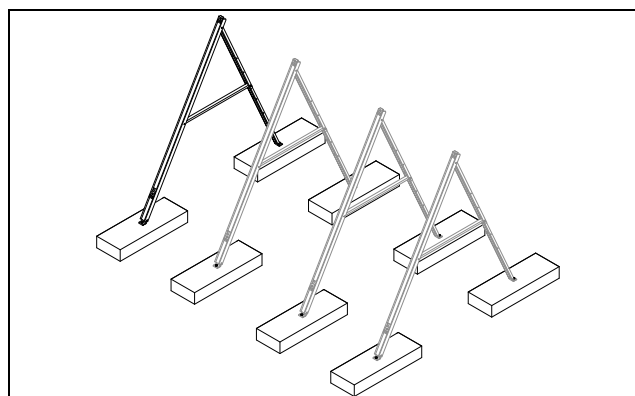

- Define the required rack clearances as described in the chapter "Defining rack clearances".



Note

For each rack, you need two equal weights.
For the first collector, you therefore need four weights. For each additional collector, you will need an additional rack.

- Transport the required number of weights to the flat roof.
- Lay the weights in the final positions of the installation site.


5 Flat roof fitting and installation



Note


The four weights for holding two racks for a collector are very heavy. Therefore, it is advisable to determine the final position and orientation of the weights before screwing on the rack and laying the weights there.

- ▶ Select a suitable fastening material for the weights used (diameter: at least 10 mm).
- ▶ Drill a hole into the centre of each weight.

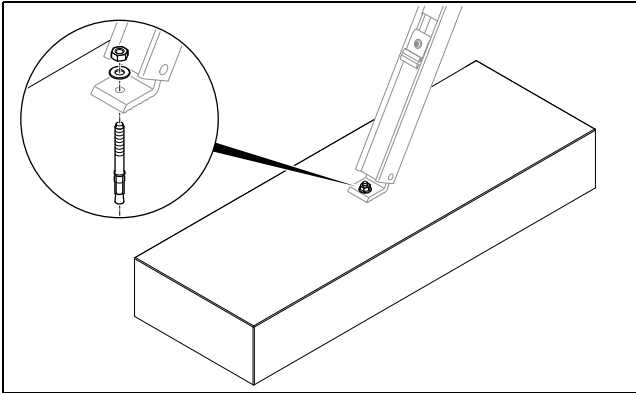

Screwing the rack onto weights

- ▶ Take hold of the first rack that is already secured in the installation angle.
 - ▶ Screw the front rack feet onto the first weight.
 - ▶ Screw the rear rack feet onto the second weight.
- ◁ The first rack is installed so that it is stable.

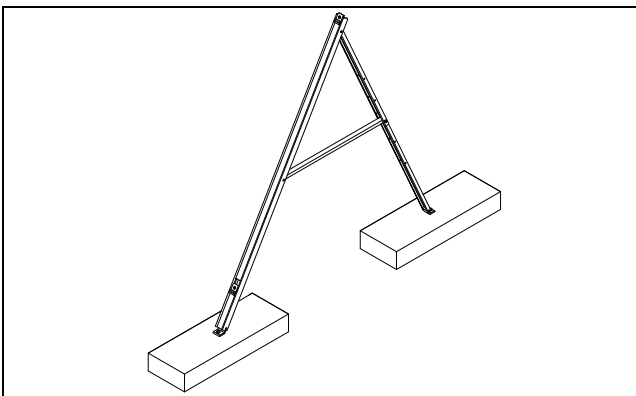

- ▶ Install the second rack on the next two weights as described above.
- ▶ Fit as many racks as you need to hold the collectors.

5.2.2 Installing collectors



Danger!


Personal injury and material damage due to a falling collector.

Improper fastening may cause a collector to fall.

- ▶ Tighten the clamping elements.
- ▶ Check for proper tensioning by shaking the clamping blocks.
- ▶ If a clamping block is mobile, tighten the nut again.


1. Install the collectors on the roof as specified in the following sections.

Sliding on mounting rails

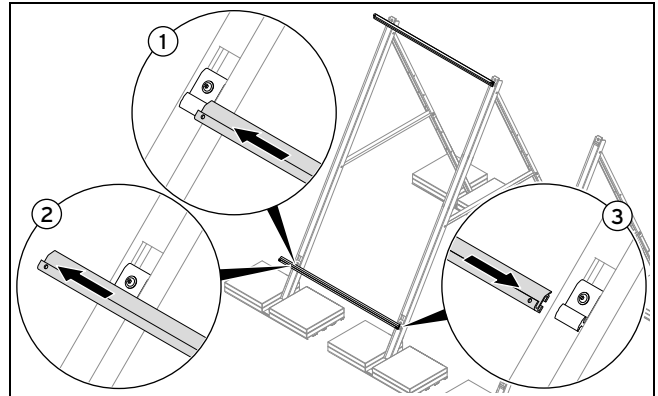


2. Slide the two mounting rails (top and bottom) onto the brackets, as shown in the image.
3. Ensure that the open side of the bottom mounting rail is facing upwards and that the open side of the top mounting rail is facing downwards.
4. First slide the mounting rail onto one bracket (1).
5. Slide the mounting rail a little outwards (2).
6. Then slide the mounting rail back to the other bracket (3).
7. Perform these steps one after the other for all racks.

Fitting mounting rails to several racks

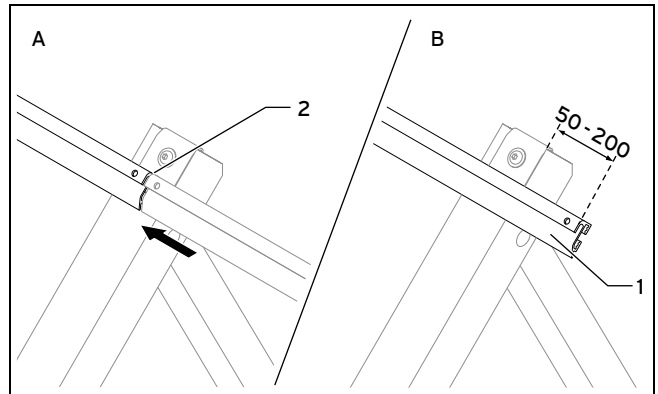

8. When installing several collectors next to each other, allow the mounting rails to end in the centre of the brackets (A).
9. Allow the mounting rails on the first and last rack to protrude 50-200 mm over the edge (B).

Connecting mounting rails

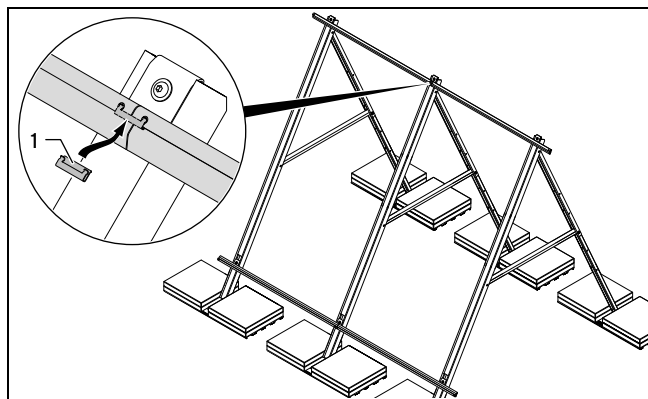


10. Clamp the rail connector (1) into the mounting rails.
11. Ensure that the rail connector (1) engages in the holes of the mounting rails.



Note


After installation, the rail connectors are no longer accessible.

Securing the mounting rails at the bottom

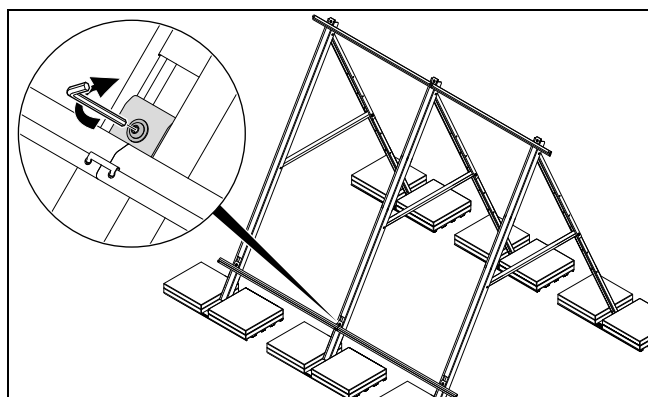

12. Screw the brackets tightly onto the lower mounting rails.
– Working materials: 5 mm Allen key

Hooking the collector in at the bottom

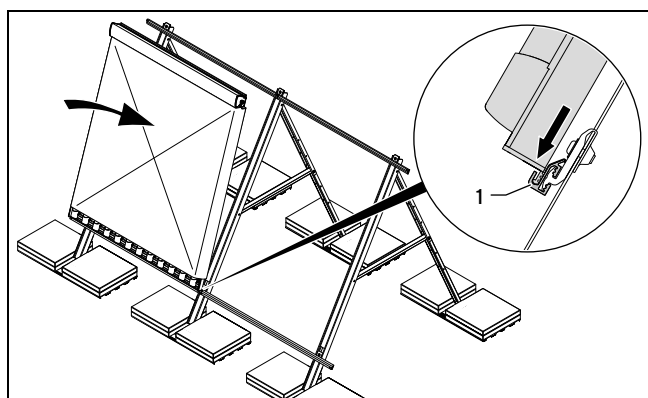

Danger!


Risk of burns and scalding!

In the event of solar radiation inside the units, collectors can reach 300 °C.

- ▶ Avoid working in direct sunlight.
- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.


13. Place the collector so that its lower edge is in the profile of the mounting rail (1) (upper collector). Ensure that the mounting rail (1) surrounds the lower edge of the collector.

Securing the collector at the top

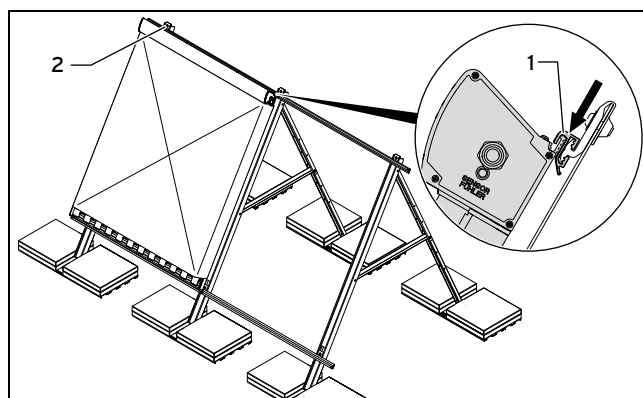

14. Slide the left side of the top mounting rail (1) until it is flush with the collector.
15. Ensure that the mounting rail (1) surrounds the top edge of the collector.
16. Screw the bracket securely on the top left (2).
– Working materials: 5 mm Allen key
17. Ensure that the mounting rail does not slip while you are tightening the screw.


Removing the carrying strap

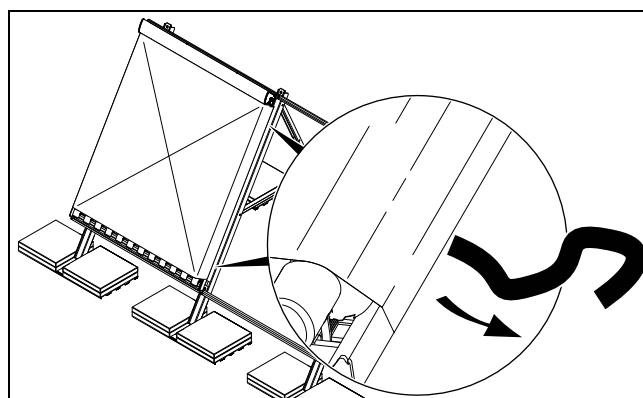

18. Remove the carrying strap.


5 Flat roof fitting and installation

Loosening the sun protection film

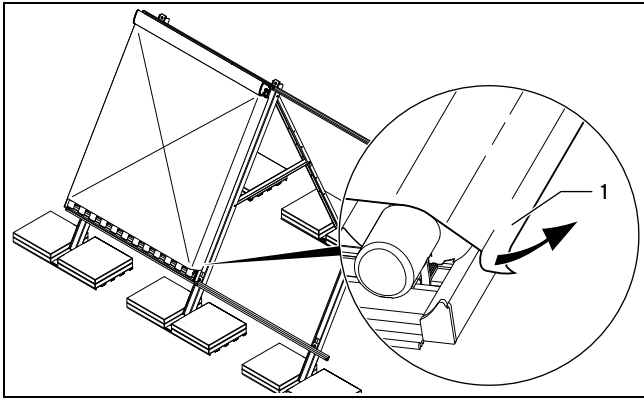


19. To ensure that the sun protection film can be easily removed after starting up the unit, loosen the sun protection film from the edges of the collector (1).

Installing additional collectors

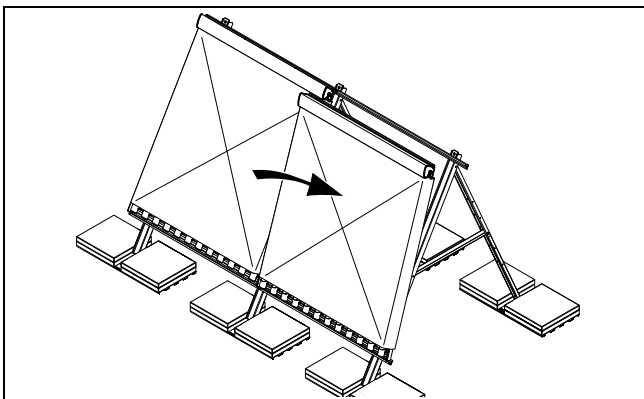


20. Position the next collector on the lower mounting rail so that there is a clearance of approx. 10 cm from the first collector.

Fitting connectors

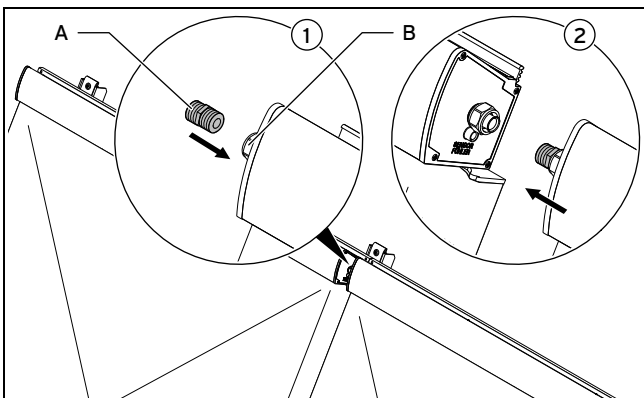

21. Screw the double nipple (A) (from installation set VTK extension set, article number 0020076779) in the thread of the second collector (B) with the cap nut of the first collector ((1) and (2)).
22. Push the collectors together.

Tightening the clamping ring connection

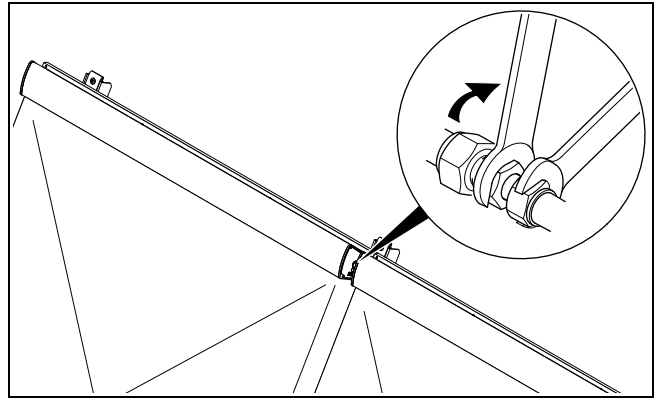

Caution.

Risk of damage to the collectors as a result of improper installation.

If the hydraulic connections are not installed properly, the stainless steel tubes inside the collector may become damaged.

- When tightening the clamping ring connection, hold a second spanner against it.

23. Screw the two cap nuts securely onto the double nipple.

Completing the installation of the collector


24. Slide the second top mounting rail until it is flush with the collector.
25. Screw the second top mounting rail tightly onto the mounting rail of the first collector using the corresponding bracket.
- Working materials: 5 mm Allen key
26. Remove the carrying strap. (→ Page 43)
27. Loosen the sun protection film from the edges of the collector. (→ Page 44)

Completing collector rows

Conditions: Not all collectors in a row have been installed yet.

- Install an additional collector. (→ Page 44)
- Fit the connectors. (→ Page 44)
- Tighten the clamping ring connection. (→ Page 44)

5.2.3 Installing hydraulic connections

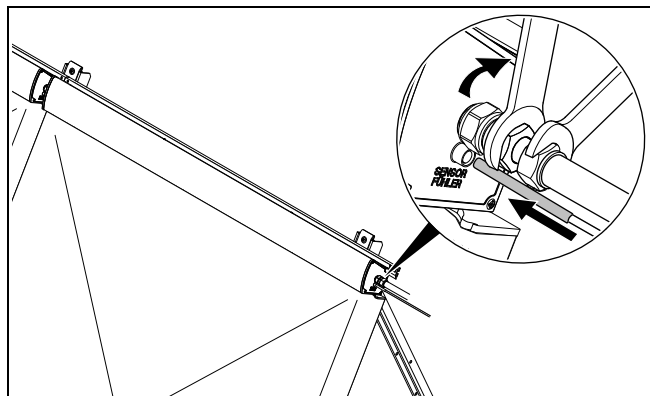

Caution.

Lack of tightness due to incorrect accessories.

Incorrect accessories may result in lack of tightness of the solar circuit and cause material damage.

- Only work in the solar circuit with hard soldered connections, flat seals, compression fittings or press fittings which have been approved by the manufacturer for use in solar circuits and at correspondingly high temperatures.



Caution.

Risk of damage to the collectors as a result of improper installation.

If the hydraulic connections are not installed properly, the stainless steel tubes inside the collector may become damaged.

- When tightening the clamping ring connection, hold a second spanner against it.

1. Connect the collector flow and return to the system with the connection tubes.
2. To do this, connect the clamping ring connection (from the installation set **VTK** basic set, article number 0020076776) to the collector.
3. Connect the clamping ring connection with the connection pipework.
4. Check the connections for tightness.

Conditions: System with collector sensor

- Insert the collector sensor into the opening provided on the collector flow side ("hot side").




Note

In general, the collector sensor can be attached to the right or left side of the collector field because the collectors on both sides have a corresponding opening.

Insulating hydraulic connections

Conditions: Start-up carried out

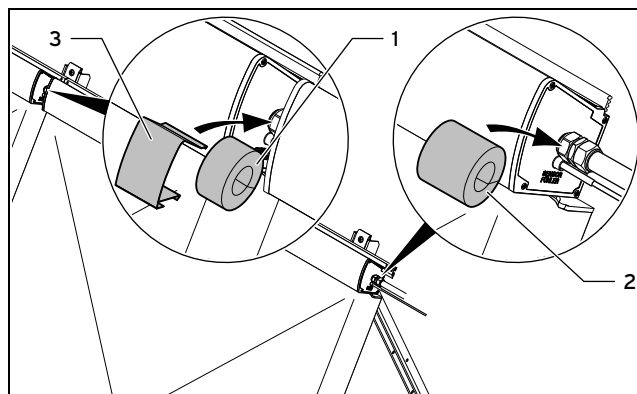

- Insulate the hydraulic connections using the insulation **(1)** (from installation set **VTK** extension set, article number 0020076779).
- Cover the insulation with the cover plate **(3)** (from installation set **VTK** extension set, article number 0020076779).
- Insulate the hydraulic system connections using the insulation **(2)** (from installation set **VTK** extension set, article number 0020076779).

5 Flat roof fitting and installation

5.3 Completing and checking the installation

5.3.1 Checking installation

Use the following checklist to ensure that all work steps have been performed.

Operations	Yes	No	Comments
Building statics taken into account during installation of the system	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Clearances from the roof edge complied with in accordance with the specifications	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Rack positioned in accordance with the dimensions specifications	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
All bolts securely tightened (Installation and telescopic rail)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Adequate ballast weights used (Only for floating installation)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Load weights adequately secured against slipping and tilting (Only for floating installation)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Rack anchored and bolts tightened (Only for direct connection)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
All hydraulic connections tightened	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Hydraulic connections routed correctly	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
VR 11 collector sensor connected (Only for systems WITH a collector sensor)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Collectors connected to lightning protection device (Optionally for lightning protection device)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
Pressure testing performed (Ideally with compressed air)	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>
All connections tight	<input type="checkbox"/>	<input type="checkbox"/>	<hr/>

	Date	Signature
All installation work has been performed correctly.	-----	<hr/>

5.3.2 Disposing of the packaging

The transport packaging consists largely of recyclable materials.

- ▶ Observe the applicable regulations.
- ▶ Dispose of the transport packaging properly.

6 Inspection and maintenance

6.1 Maintenance plan

The following table shows the inspection and maintenance work that must be carried out at specific intervals.

6.1.1 Calendar-based maintenance intervals

Calendar-based maintenance intervals

Interval	Maintenance work	Page
Annually	Checking collectors and connections for damage, dirt and lack of tightness	47
	Cleaning collectors	48
	Checking brackets and collector components for firm seating	48
	Check the pipe insulations for damage	48
	Replacing damaged pipe insulations	48
	Disposing of damaged pipe insulations	48

6.2 Observing inspection and maintenance intervals

Regular inspection/maintenance of the entire solar plant by a competent person is a prerequisite for ensuring that the system is constantly ready for operation, reliable and has a long service life. Vaillant recommends that you sign a maintenance contract.



Danger!

Risk of death, injury and material damage due to failure to perform maintenance and repairs work!

Failure to perform maintenance or repair work, or failure to comply with the specified maintenance intervals, may impair the operating safety of the unit and cause material damage and personal injury.

- ▶ Instruct the operator to observe the specified maintenance intervals strictly.
- ▶ Perform maintenance work on the collectors in accordance with the maintenance plan.

6.3 General inspection and maintenance instructions



Danger!

Risk of death, injury and material damage due to improper maintenance and repairs!

Improper maintenance work or repairs can impair the operating safety of the unit and result in material damage and personal injury.

- ▶ Only perform maintenance work and repairs on the collectors if you are a qualified competent person.

6.4 Preparing for inspection and maintenance

6.4.1 Spare parts for maintenance

If you require spare parts for servicing or repair work, use only Vaillant genuine spare parts.

The original components of the unit were also certified as part of the CE declaration of conformity. If you do not use certified Vaillant genuine spare parts, this voids the CE conformity of the unit. We therefore strongly recommend that you fit Vaillant genuine spare parts.

Applies to: Great Britain

An overview of the available genuine Vaillant spare parts can be obtained:

- From your parts wholesaler
- Alternatively contact Spares Technical Enquiries on 01773 596615 or via email: technicalspares@groupservice.co.uk

6.4.2 Preparing for maintenance

- ▶ Put together all the tools and materials required for the maintenance work.

6.5 Checking collectors and connections for damage, dirt and lack of tightness

1. Check the collectors for damage.
If the collectors are damaged:
 - ▶ Replace the collectors.
2. Check the collectors for dirt.
If the collectors are dirty:
 - ▶ Clean the collectors. (→ Page 48)
3. Check the connections for lack of tightness.
If the connections are not tight:
 - ▶ Seal the leaking connections. (→ Page 49)

7 Troubleshooting

6.6 Cleaning collectors



Danger!

Risk of burns and scalding!

In the event of solar radiation inside the units, collectors can reach 200 °C.

- ▶ Avoid working in direct sunlight.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.
- ▶ Wear suitable protective goggles.



Caution.

Material damage due to high-pressure cleaner.

High-pressure cleaners may damage the collectors due to the extremely high pressure.

- ▶ Never clean the collectors with a high-pressure cleaner.



Caution.

Material damage due to cleaning agent.

Cleaning agents may damage the surface structure of the collector and decrease its efficiency.

- ▶ Never clean the collector with cleaning agents.

- ▶ Clean the collectors with a sponge and water.

6.7 Checking brackets and collector components for firm seating

- ▶ Check the firm seating of all threaded connections.
If threaded connections are loose:
 - ▶ Tighten the threaded connections.

6.8 Check the pipe insulations for damage

- ▶ Check the pipe insulations for damage.
If the pipe insulations are damaged:
 - ▶ To avoid heat losses, replace any damaged pipe insulations. (→ Page 48)

6.9 Replacing damaged pipe insulations

1. Put the solar plant temporarily out of operation (→ Page 49).
2. Replace the damaged pipe insulations.
3. Start the solar plant up again.

6.10 Disposing of damaged pipe insulations

The pipe insulations consist largely of recyclable materials.

The pipe insulations must not be disposed of with normal household waste.

- ▶ Observe the applicable regulations.
- ▶ Dispose of the damaged pipe insulations properly.

7 Troubleshooting

7.1 Spare parts for repair

If you require spare parts for servicing or repair work, use only Vaillant genuine spare parts.

The original components of the unit were also certified as part of the CE declaration of conformity. If you do not use certified Vaillant genuine spare parts, this voids the CE conformity of the unit. We therefore strongly recommend that you fit Vaillant genuine spare parts.

Applies to: Great Britain

An overview of the available genuine Vaillant spare parts can be obtained:

- From your parts wholesaler
- Alternatively contact Spares Technical Enquiries on 01773 596615 or via email: technic-alspares@groupservice.co.uk

7.2 Carrying out repairs

7.2.1 Replace leaking collectors



Danger!

Risk of burns and scalding!

In the event of solar radiation inside the units, collectors can reach 300 °C.

- ▶ Avoid working in direct sunlight.
- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.

1. Put the solar plant temporarily out of operation (→ Page 49).
2. Replace the leaking collectors.
3. Start up the solar plant again as described in the operating system instructions.

7.2.2 Disposing of defective collectors

Your Vaillant collector consists largely of recyclable materials.

The Vaillant collector must not be disposed of with normal household waste.

- ▶ Observe the applicable regulations.
- ▶ Dispose of defective Vaillant collectors properly.

7.2.3 Sealing leaking connections



Danger!

Risk of burns and scalding!

In the event of solar radiation inside the units, collectors can reach 300 °C.

- ▶ Avoid working in direct sunlight.
- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.

1. Put the solar plant temporarily out of operation (→ Page 49).
2. Seal the leaking connections.
3. Start up the solar plant again as described in the operating system instructions.

7.2.4 Replacing defective pipe insulations

1. Put the solar plant temporarily out of operation (→ Page 49).
2. To avoid heat losses, replace any defective pipe insulations.
3. Start up the solar plant again as described in the operating system instructions.

7.2.5 Disposing of defective pipe insulations

The pipe insulations consist largely of recyclable materials.

The pipe insulations must not be disposed of with normal household waste.

- ▶ Observe the applicable regulations.
- ▶ Dispose of the defective pipe insulations properly.

7.2.6 Replacing defective tubes



Danger!

Risk of injury caused by damaged vacuum tubes and sharp-edged components.

Shards and sharp-edged components may lead to cuts.

- ▶ Wear suitable safety gloves.



Danger!

Risk of burns from hot components!

The U tube, heat conducting plate and the interior of the vacuum tubes become warm as a result of solar radiation and may cause scalding.

- ▶ Wear suitable safety gloves.
- ▶ Wear suitable protective goggles.

1. Only use genuine Vaillant replacement tubes (article number 0020077347).



Note

If a tube has been damaged by a hailstorm, for example, the individual tube can be replaced.

The solar plant can remain in operation when replacing the tube.

2. Observe the relevant installation manual that is enclosed with the replacement tube.

7.2.7 Disposing of defective tubes

The Vaillant tubes consist largely of recyclable materials.

The Vaillant tubes must not be disposed of with normal household waste.

- ▶ Observe the applicable regulations.
- ▶ Dispose of defective Vaillant tubes properly.

8 Decommissioning

8.1 Temporary decommissioning



Caution.

Damage to the collectors.

Collectors that are not in operation may age more rapidly due to long periods of high idle temperatures.

- ▶ Only put the solar plant out of operation if you are a competent person.
- ▶ Do not decommission the collectors for more than four weeks.
- ▶ Cover any collectors that are not in use. Make sure that the cover is securely fastened.
- ▶ In the event of long periods of decommissioning of the solar plant, dismantle the collectors.



Caution.

Oxidation of the solar fluid.

If the solar circuit is opened when out of service for a prolonged period of time, the solar fluid may age more rapidly due to the penetrating oxygen in the air.

9 Customer service

- ▶ Only decommission the solar plant if you are a competent person.
- ▶ Do not decommission the collectors for more than four weeks.
- ▶ Before decommissioning the system for a prolonged period of time, drain the entire solar plant and dispose of the solar fluid properly.
- ▶ In the event of long periods of decommissioning of the solar plant, dismantle the collectors.

For repair or maintenance work, you can temporarily decommission the solar plant. To do this, you must switch off the solar pump.

- ▶ Temporarily decommission the solar plant, as described in the operating system instructions.

8.2 Permanently decommissioning

8.2.1 Removing collectors



Danger!

Risk of burns and scalding!

In the event of solar radiation inside the units, collectors can reach 300 °C.

- ▶ Avoid working in direct sunlight.
- ▶ Cover the collectors before starting work.
- ▶ You should preferably perform the work in the morning.
- ▶ Wear suitable safety gloves.



Danger!

Risk of burns from hot components!

The U tube, heat conducting plate and the interior of the vacuum tubes become warm as a result of solar radiation and may cause scalding.

- ▶ Wear suitable safety gloves.
- ▶ Wear suitable protective goggles.



Caution.

Damage to the collector and the solar plant.

Improper removal may cause damage to the collector and to the solar plant.

- ▶ Before removing the collectors, ensure that a competent person or a Vaillant customer service engineer decommissions the solar plant.



Caution.

Environmental hazard due to solar fluid.

After the solar plant is decommissioned, the collector is still filled with solar fluid which can leak out during removal.

- ▶ During transport from the roof, seal the pipe connections of the collector with the red plugs.

1. Undo the hydraulic connections.
2. Undo the clamping elements.
3. Remove the collectors from the roof.



Note

Do not use the carrying straps when removing the collectors as these may become brittle due to prolonged exposure to outside weather.

4. Remove the sealing plugs.
5. Drain the collector fully into a canister through two connections.
6. Fit the sealing plugs again.
7. Use adequate packing around the collectors.
8. Dispose of the collectors and the solar fluid.

8.2.2 Recycling and disposal

Your Vaillant collector consists largely of recyclable materials.

- ▶ Observe the applicable regulations.

Disposing of collectors

You must not dispose of your Vaillant collector or any of its accessories in normal domestic waste.

- ▶ Dispose of the old unit and any accessories properly.

Disposing of solar fluid

The solar fluid must not be disposed of with normal household waste.

- ▶ Dispose of the solar fluid in compliance with local regulations through an appropriate disposal company.
- ▶ Dispose of packaging that cannot be cleaned in the same way as solar fluid.

Uncontaminated packaging can be reused.

9 Customer service

Applies to: Great Britain

To ensure regular servicing, it is strongly recommended that arrangements are made for a Maintenance Agreement.

Please contact Vaillant Service Solutions for further details:
+44 80 70 606 07 77


10 Technical data


10.1 Technical data table

	Unit	VTK 570/2	VTK 1140/2
Number of tubes	–	6	12
η_0 (Aperture), DIN4757-4 or EN12975	%	64.2	
c_1 with wind, or on aperture	W/(m ² k)	0.885	
c_2 with wind, or on aperture	W/(m ² k ²)	0.001	
$K_{\theta,trans}$ (50°), or on aperture	–	1	
$K_{\theta,long}$ (50°), or on aperture	–	0.9	
Yield forecast (location: Würzburg, 5 m ² aperture, 300 litre cylinder, 4 people)	kWh/m ² a	586	
Peak output per collector module W_{peak}	W	642	1278
Area-related heat capacity c	kJ/(m ² k)	8.3	
Volume flow (per m ² of collector surface)	l/(m ² h)	24	
Minimum volume flow in the solar circuit	l/h	180	
Absolute pressure in the high vacuum	bar	10 ⁻⁵ mbar (= 10 ⁻⁸ bar)	
Alpha absorber absorption	–	> 93.5% (see also ITW test report)	
Epsilon absorber emission	–	< 6% (see also ITW test report)	
Grid dimensions (length x height x depth)	m	0.7 x 1.65 x 0.11	1.39 x 1.65 x 0.11
Gross area	m ²	1.16	2.30
Aperture surface area	m ²	1.0	2.0
Absorber surface area	m ²	1.0	2.0
Collector capacity	l	0.9	1.8
Weight	kg	19	37
System overpressure, max. permissible	bar	10	
Shutdown temperature, max.	°C	272	
Connection width, flow/return	mm	15	
Material for the tube collector	–	Al/1.4301/glass/silicone/PBT/EPDM/TE	
Material for glass tubes	–	Borosilicate 3.3	
Material for selective absorber layer	–	Aluminium nitride	
Glass tubes (outer diameter/inner diameter/wall thickness/tube length)	–	47 / 37 / 1.6 / 1500	
Colour (plastic parts)	–	Black	
Thermal shock test	ITW test number	02COL282	
Hail impact test in accordance with DIN EN 12975-2	TÜV test number	435/142448	
Type approval number	–	01-228-770	
Max. wind load	kg/Nm ²	1.2	
Max. standard snow load	kg/Nm ²	5	
On-roof installation angle	°	15-75	
Flat roof installation angle	°	30, 45, 60	

10 Technical data


10.2 Dimensions

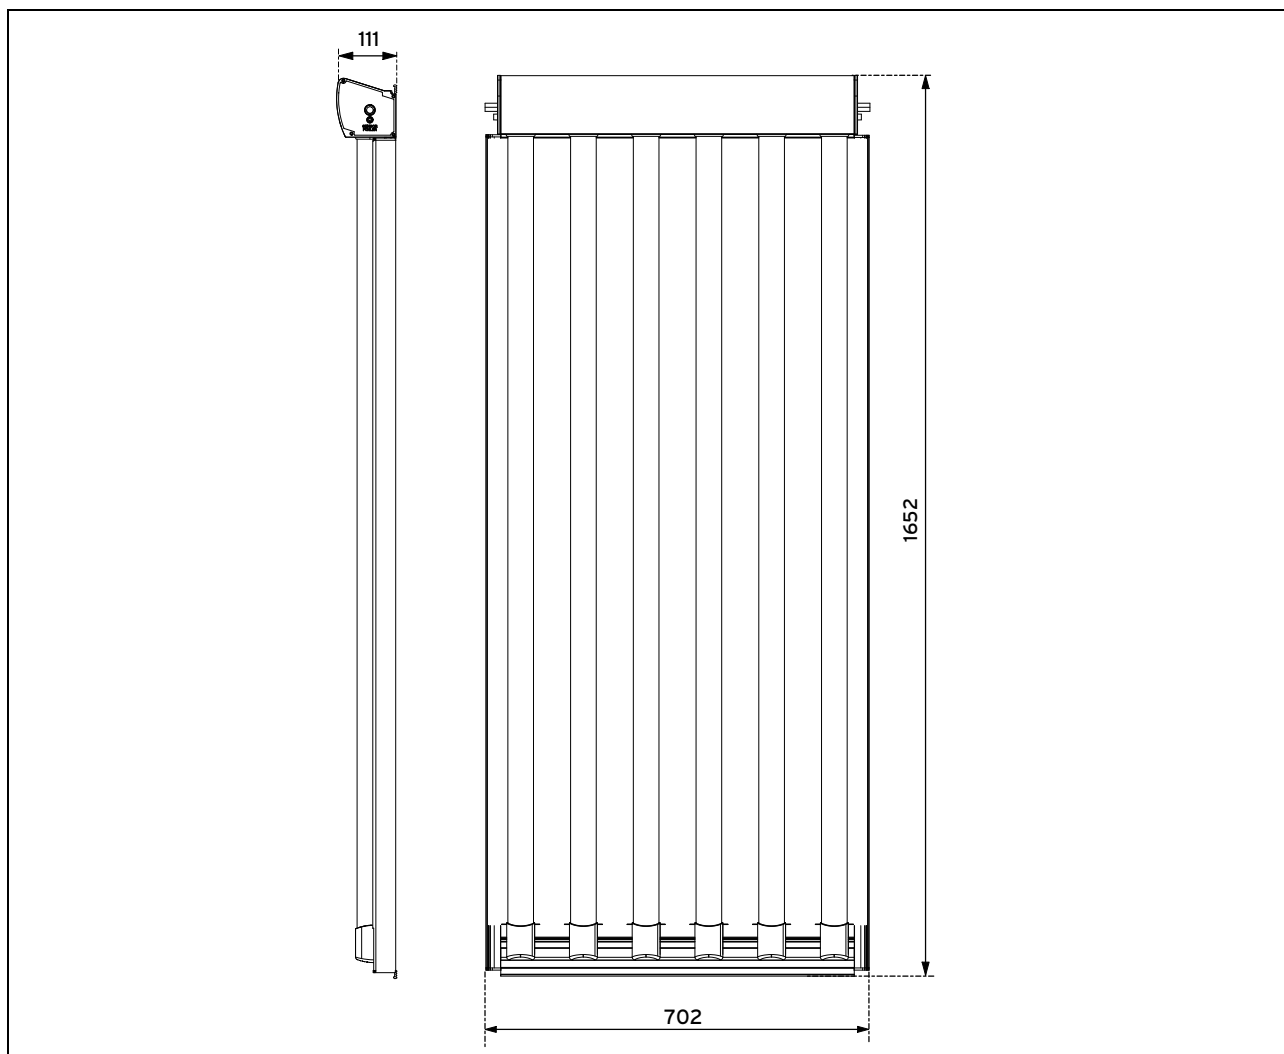

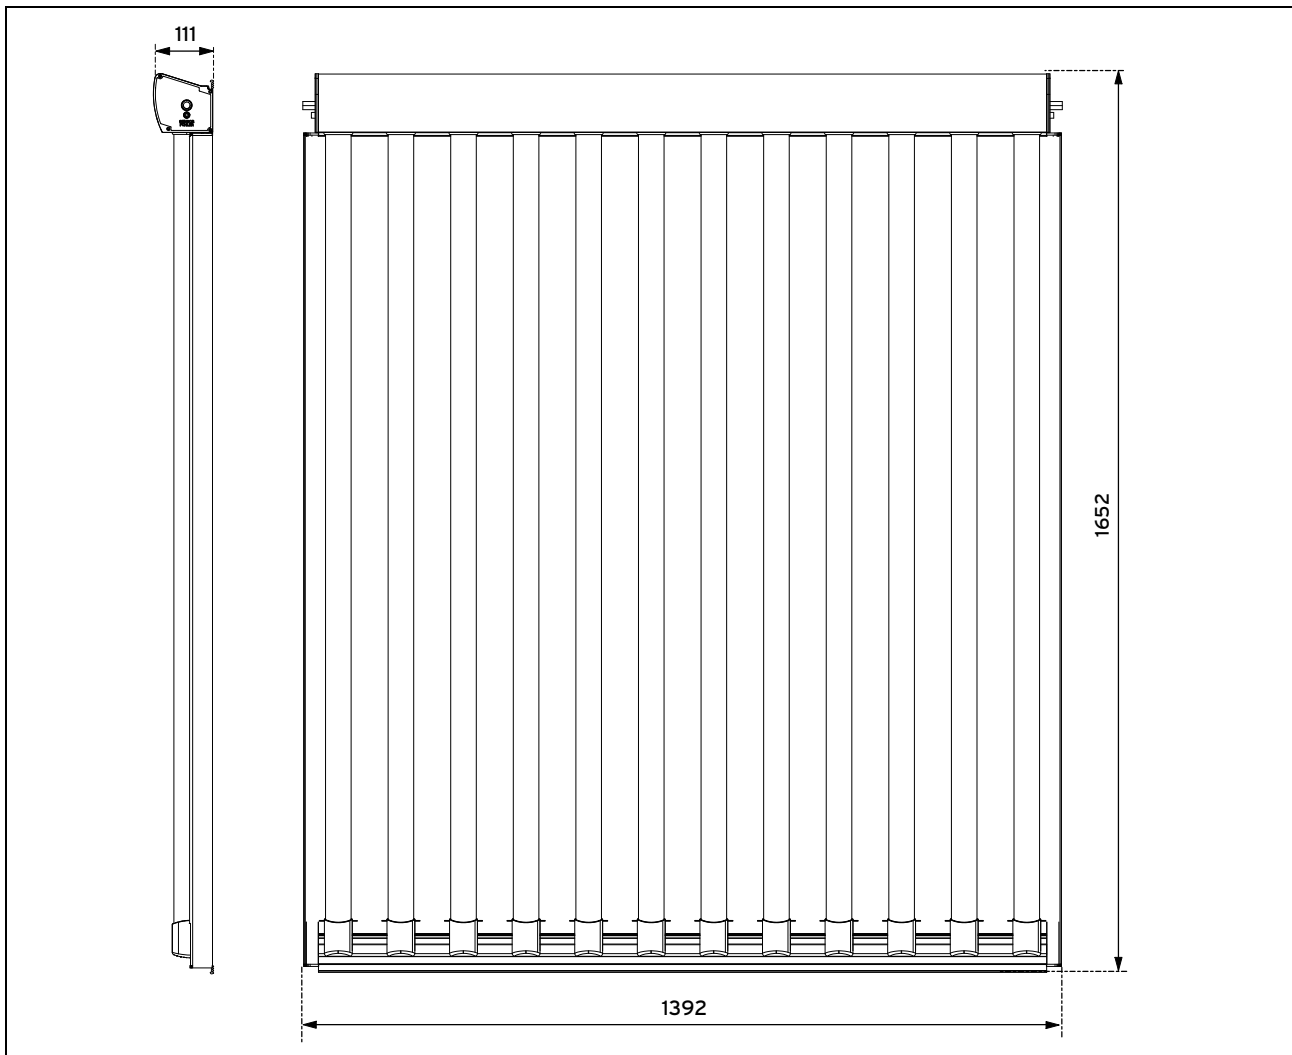

10.3 Efficiency and pressure loss


Efficiency of the VTK 570/2 and the VTK 1140/2 at a solar energy input EG of 300 W/m^2

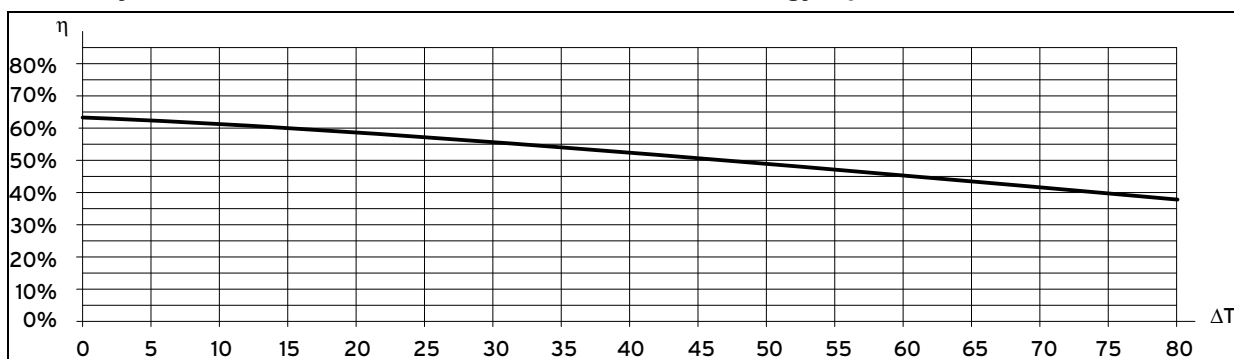

η Efficiency [%] ΔT $T_{\text{collector}} - T_{\text{ambient air}}$ [K]


10 Technical data

Efficiency of the VTK 570/2 and the VTK1140/2 at a solar energy input EG of 800 W/m²

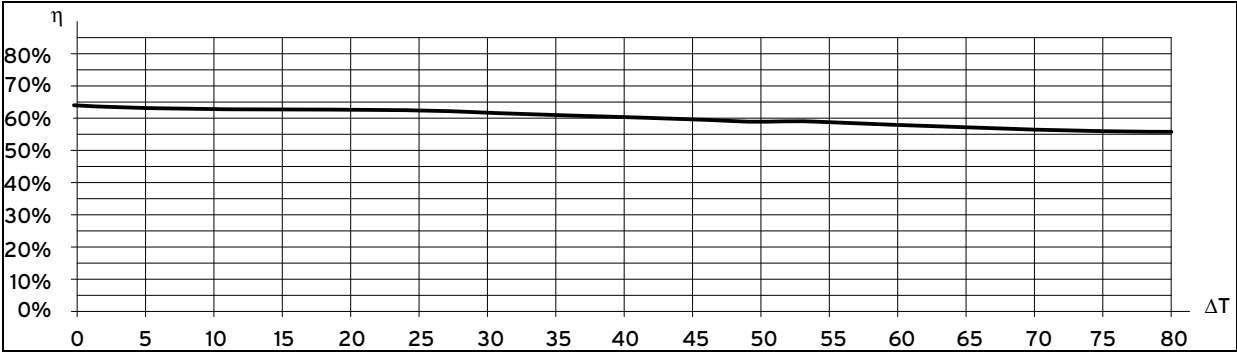

η Efficiency [%] ΔT T_{collector} - ambient air T [K]

Pressure loss

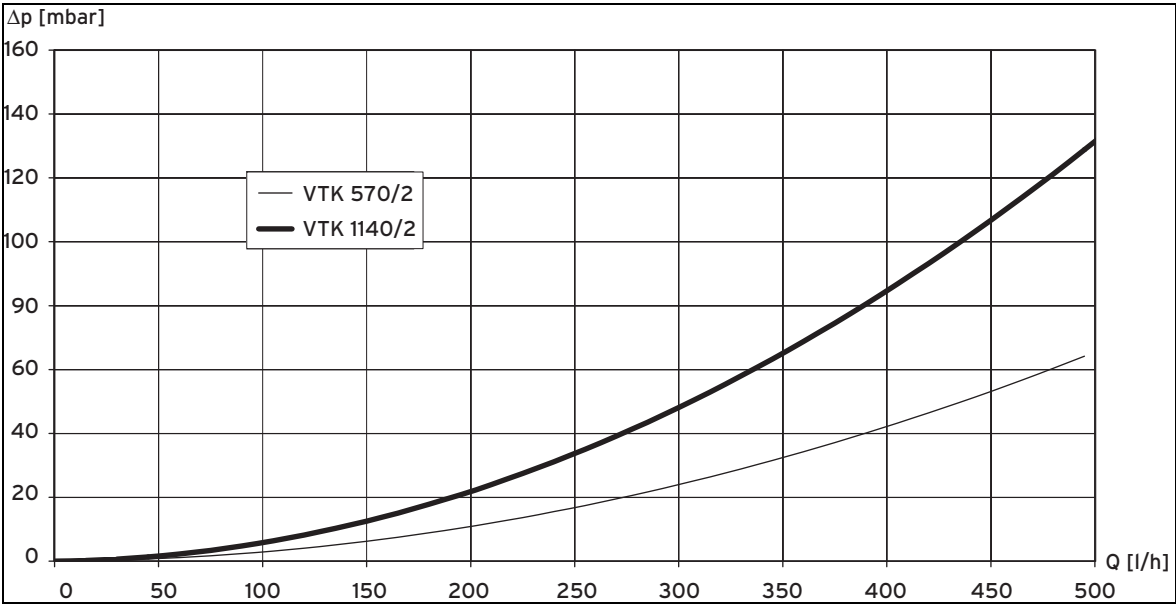

Q Mass flow [l/h] Δp Pressure loss [mbar]

Index

A		M	
Applicability		Maintenance	
Manual.....	4	Preparing	47
Article numbers	4	Maintenance plan	47
B		P	
Ballast load (floating installation)		Packaging	
Determining	30	Disposal	26, 47
Brackets		Pipe insulations	
Checking	48	Checking.....	48
C		Disposal	48–49
CE label	7	Replacing	48–49
Checklist		Purpose	
Installing.....	25, 46	Unit	8
Clearances		R	
Complying with	10, 28	Rack	
Collector components		Defining clearances	37
Checking	48	Installing.....	39
Collectors		Recycling	
Checking	47	Collectors	50
Cleaning.....	48	Packaging	26, 47
Disposal	49	Solar fluid	50
Installing.....	21, 42	Roof bracket	
Removing.....	50	Defining edge clearances	15
Replacing	48	Determining the number	15
Storing	8, 26	Roof duct	
Transporting.....	10, 28	Preparing	11, 29
Components		S	
Putting together	12, 30	Scope of delivery	
Connection		Checking.....	9, 27
Selecting	10, 28	Select installation variant, flat roof.....	29
Connection rules	10, 28	Spare parts	
Connection schemas.....	10, 28	Maintenance	47
Connections		Troubleshooting	48
Checking	47	T	
Sealing.....	49	Technical data	51
Customer service	50	Dimensions	52
D		Efficiency	53
Decommissioning	49	Pressure loss	53
Disposal		Tubes	
Collectors	50	Disposal	49
Packaging	26, 47	Replacing	49
Solar fluid	50	Type overview	8
Documents, other applicable	4	U	
F		Unit	
Final work		Purpose	8
Installing.....	25, 46	Use, intended	6
H			
Hydraulic connections			
Installing.....	23, 45		
I			
Identification plate	8		
Installation clearances			
Complying with	10, 28		
Installing			
Checking	25, 46		
Intended use.....	6		
L			
Leaking connections			
Sealing.....	49		

0020077994_03

Vaillant Ltd

Nottingham Road ■ Belper ■ Derbyshire ■ DE56 1JT

Telephone +44 845 602 29 22 ■ Please contact Vaillant Service Solutions for further details +44 80 70 606 07
77

info@vaillant.co.uk ■ www.vaillant.co.uk